

**STEP 1 | COLUMN**.....Page 3

**STEP 2 | MOUNT**.....Page 4

**STEP 3 | WORK SURFACE**.....Page 5

**STEP 4 | BEAM**.....Page 6

**STEP 5 | MONITOR TILTER**.....Page 7

**STEP 6 | MONITOR CUPS**.....Page 8

**STEP 7 | CABLE MANAGEMENT**.....Page 9

 
**NOTE:** Depending on your Winston Workstation® configuration, you may not receive all the parts shown within this instruction booklet.

Installation may require two people.

available at:



 
 

 
 
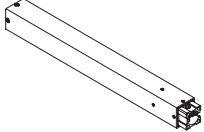 
 

 


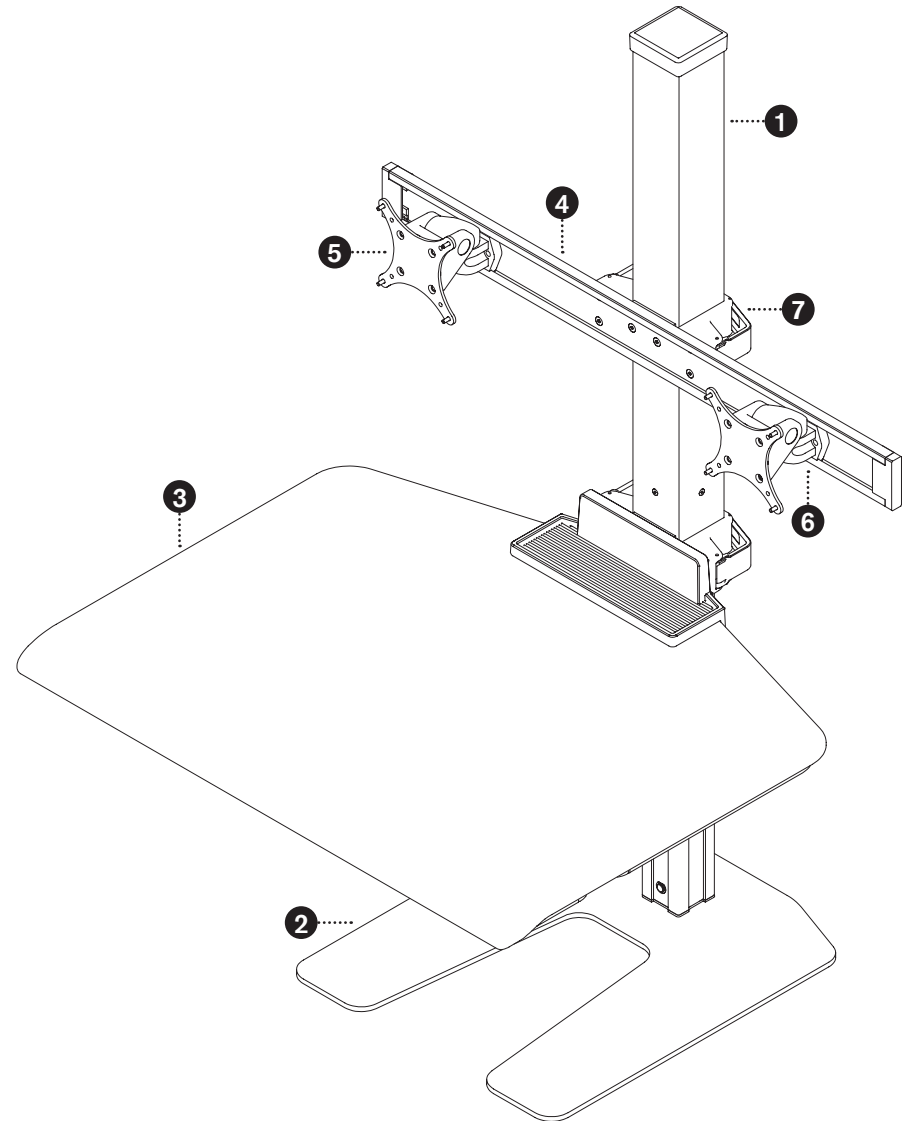 

 


 

 


 

 
800.531.3746  
info@thehumansolution.com  
thehumansolution.com



Depending on your Winston Workstation® configuration, **you may not receive all parts** shown below.

# WNST-1 & WNST-2

 
 
 
 
 
Winston Workstation® Single & Dual | Parts List
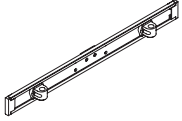
<p>A</p> <p>Work Surface 411469</p> 	<p>F</p> <p>3/8-16 x 1" FHSCS 701124</p> 	<p>K</p> <p>1/8" Allen Wrench 701312</p> 	<p>P</p> <p>Standard Monitor Tilter 405397</p> 	<p>U</p> <p>Fine Tune Adjust 8473</p> 
<p>B</p> <p>Column 411470-M</p> 	<p>G</p> <p>10-32 x 1" FHSCS 711467</p> 	<p>L</p> <p>7/32" Allen Wrench 701127</p> 	<p>Q</p> <p>HD Monitor Tilter 407747</p> 	<p>V</p> <p>Dog Washer 111230-603</p> 
<p>C</p> <p>Felt Pad 111464</p> 	<p>H</p> <p>Column Clamp 111040</p> 	<p>M</p> <p>Column Cap 111275-708</p> 	<p>R</p> <p>M4 x 12mm PhPHS 702096</p> 	<p>W</p> <p>10-32 x 1/2" FHSCS 711240</p> 
<p>D</p> <p>Freestanding Base 111731</p> 	<p>I</p> <p>Utility Tray 111445</p> 	<p>N</p> <p>10-32 x 3/8" PhPHS 702281</p> 	<p>S</p> <p>QR VESA Adapter 109464</p> 	<p>X</p> <p>Column Cable Clip 111203-708</p> 
<p>E</p> <p>Cable Retainer 111735</p> 	<p>J</p> <p>Beam (10" or 30") 412036 or 412037</p> 	<p>O</p> <p>75/100 mm VESA Adapter 105587</p> 	<p>T</p> <p>QR Monitor Tilter 411019</p> 	

# STEP 1

# COLUMN






**IMPORTANT:** Do not pull excessively on cable – doing so may result in accidental actuation of column.

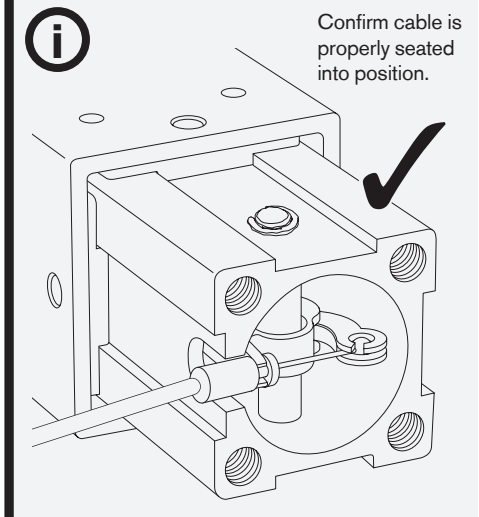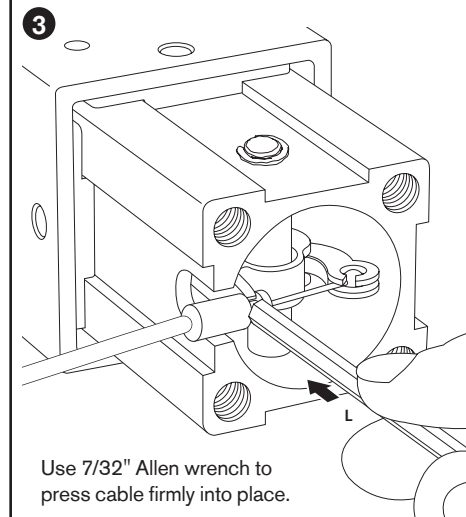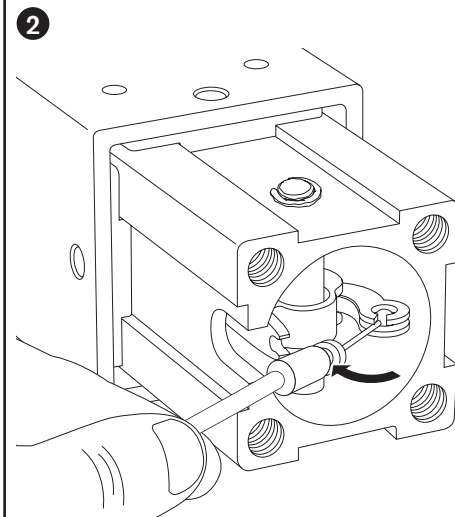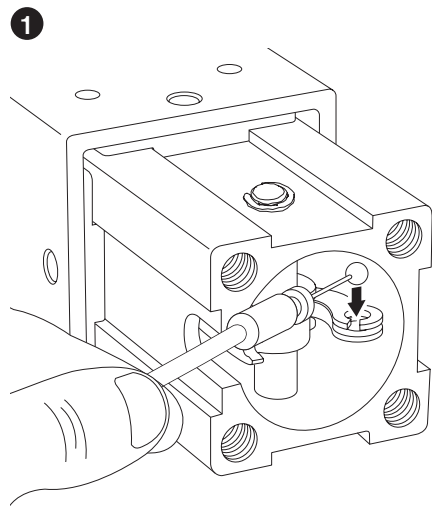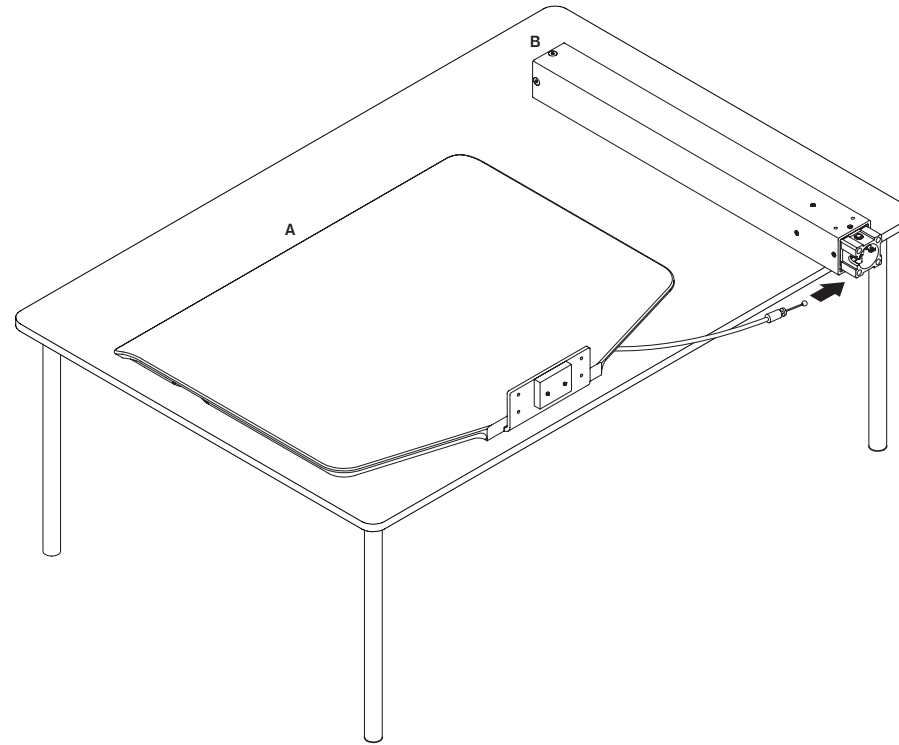

Confirm cable is properly seated into position.

# STEP 2

     
# FREESTANDING MOUNT

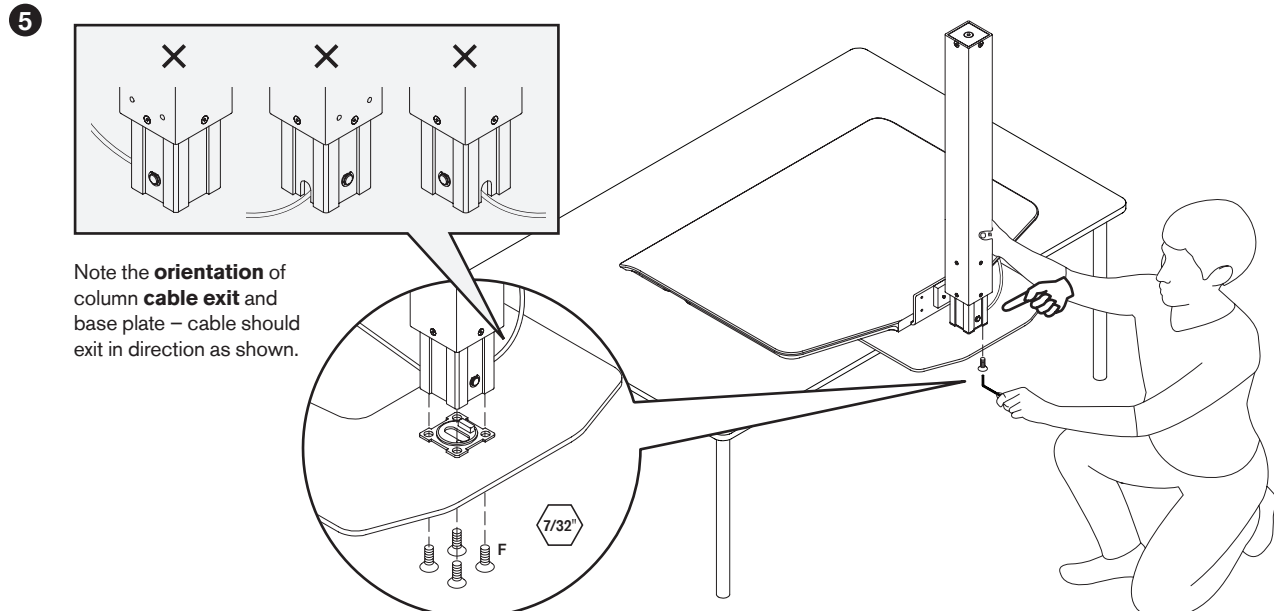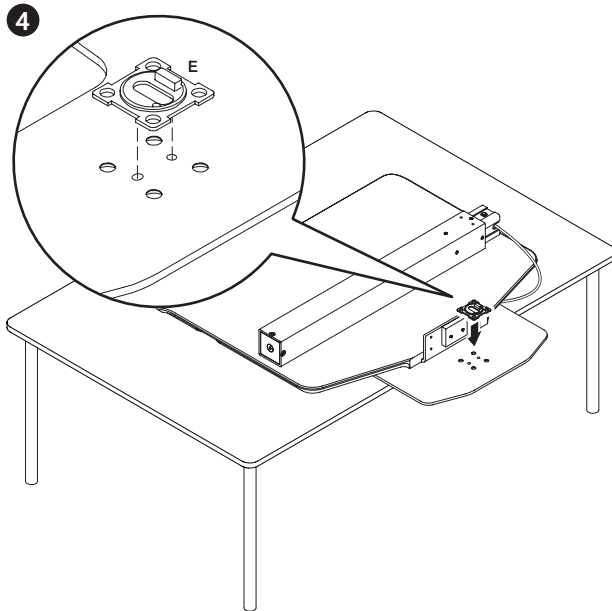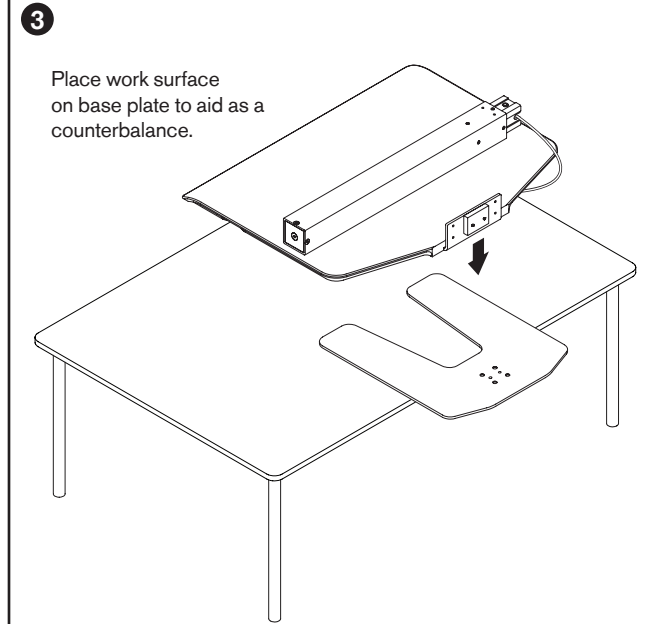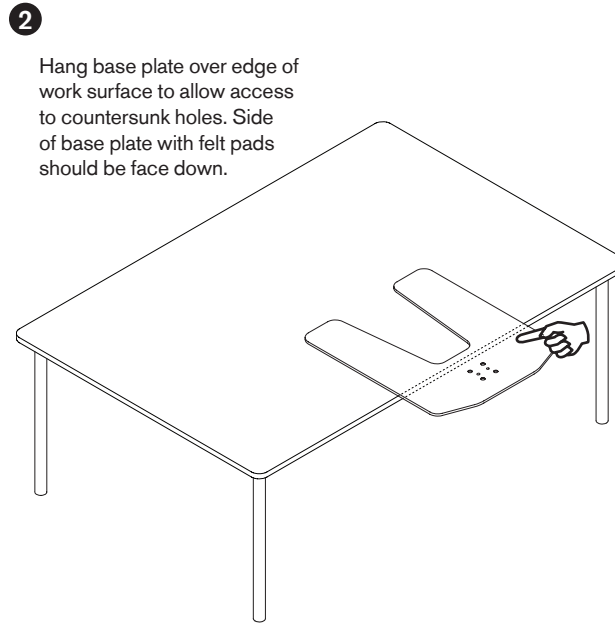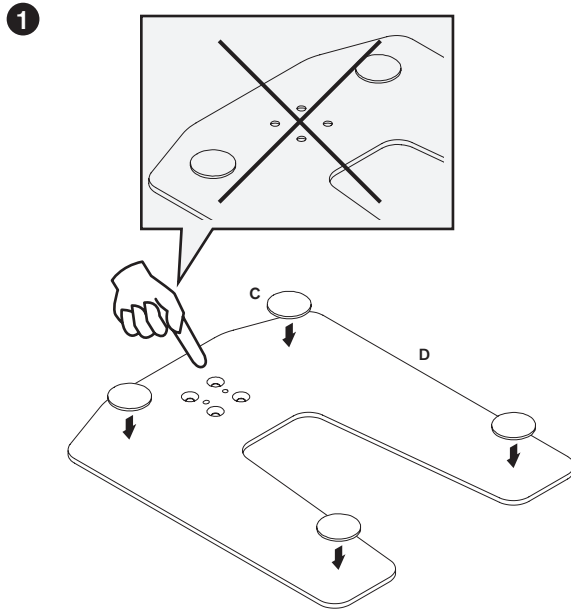

# STEP 3

# WORK SURFACE

 
1

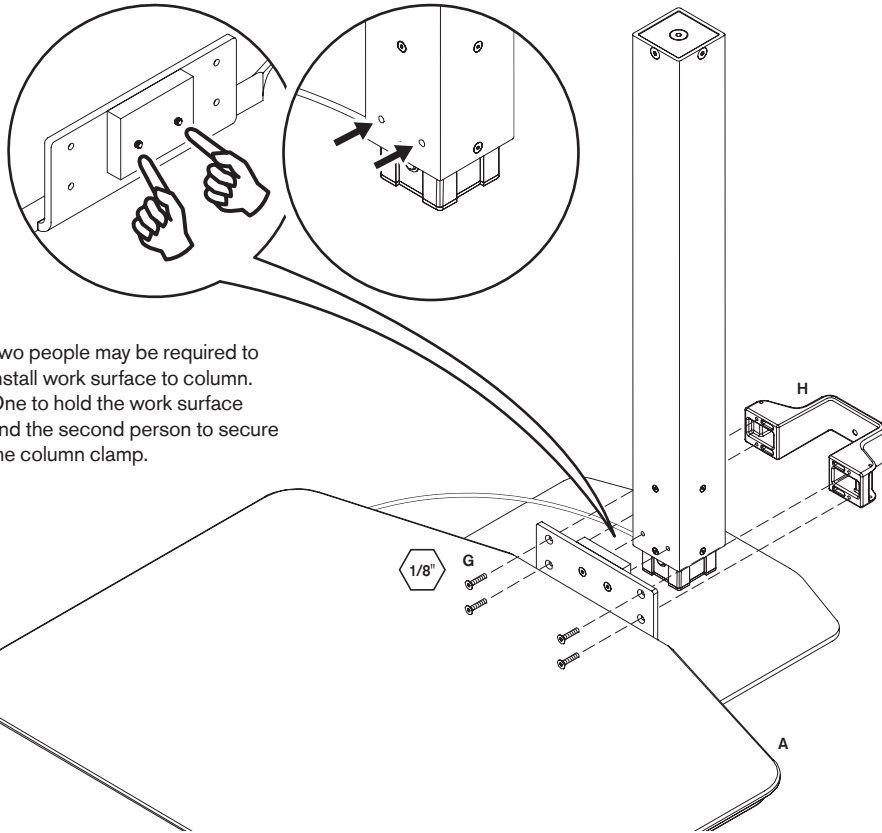

Two people may be required to install work surface to column. One to hold the work surface and the second person to secure the column clamp.

2

 Slide utility tray onto work surface. Utility tray simply rests on top of work surface.

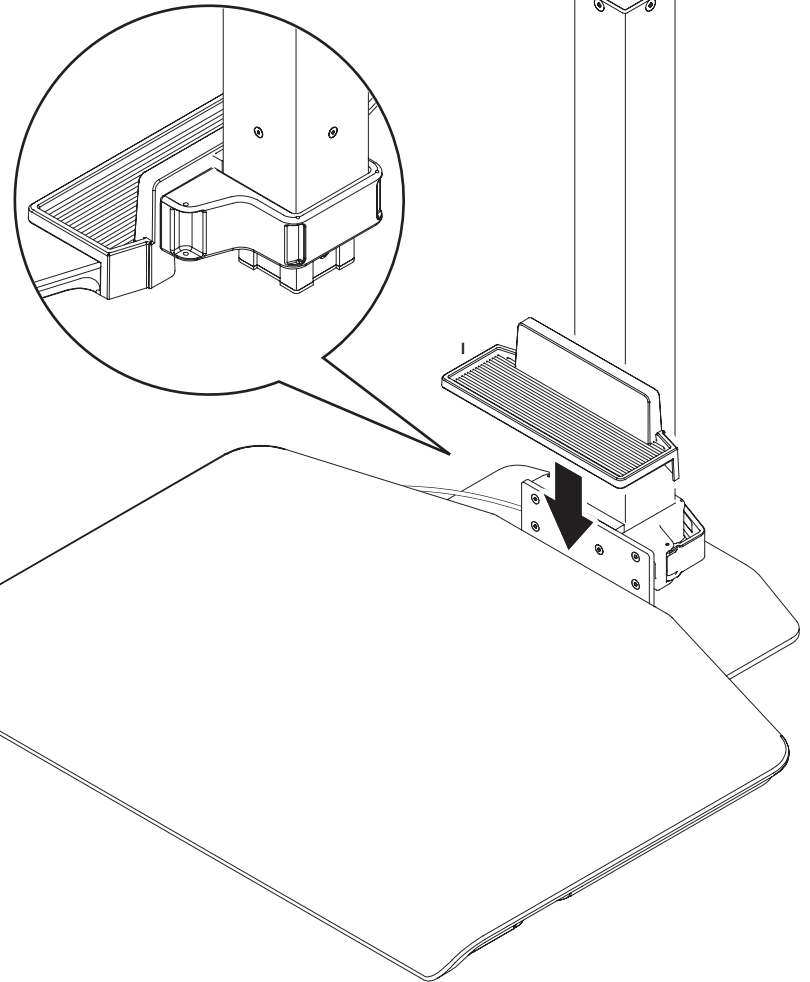


i

**IMPORTANT:** Tighten bolts evenly. Work surface clamp should sit flush against the column, ensure there are no gaps. Also, it is important the work surface clamp is level.


# STEP 4
 
# BEAM


1

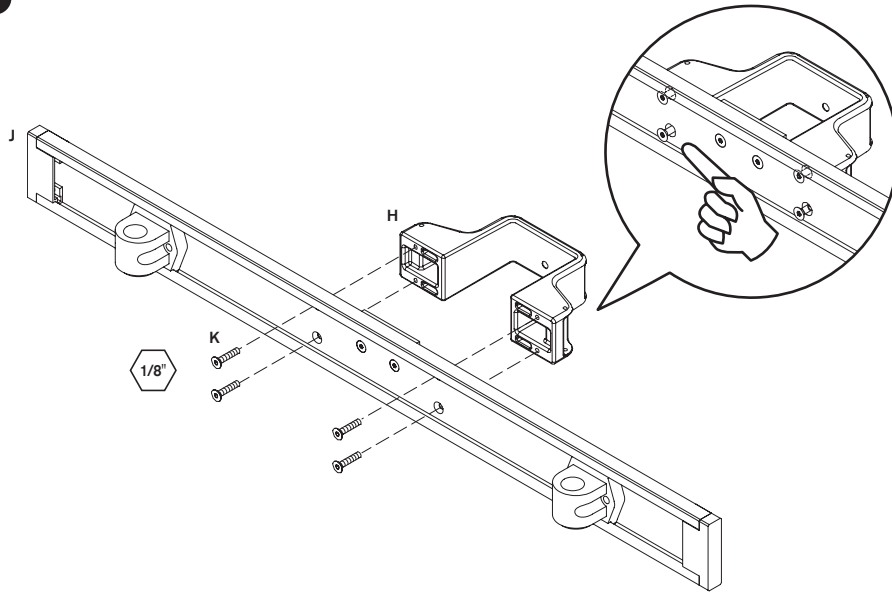

2

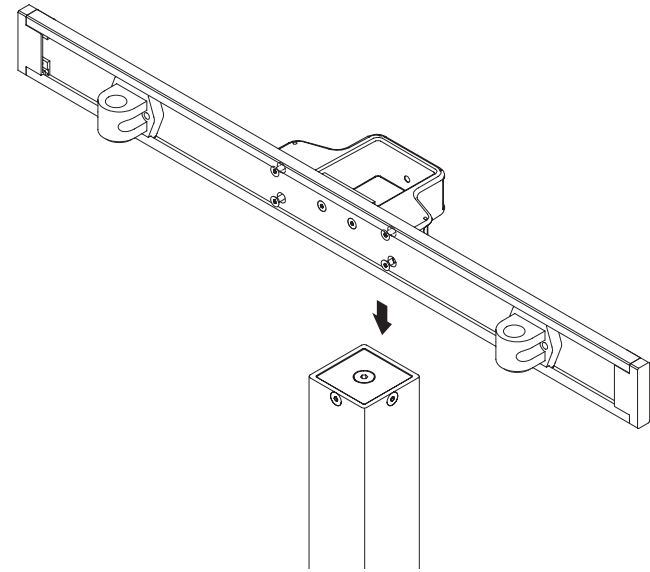 


3

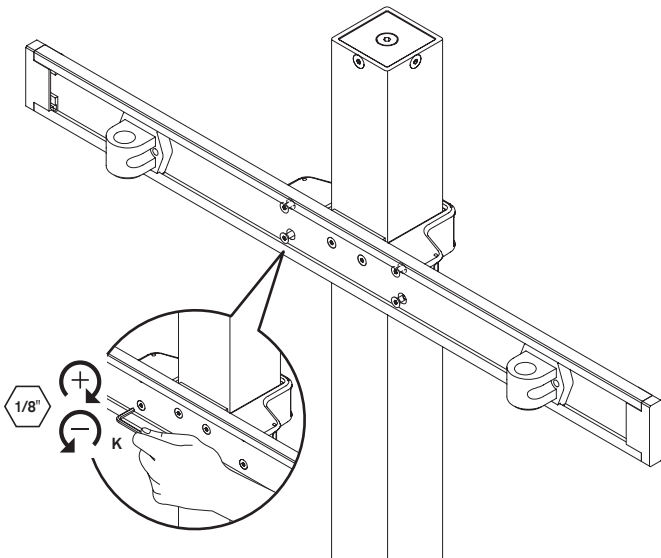 


**IMPORTANT:**

 Tighten bolts evenly.  
The beam should sit flush against the column, ensure there are no gaps. Also, it is important the work surface clamp is level.

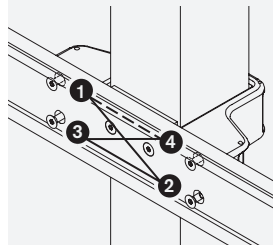



4

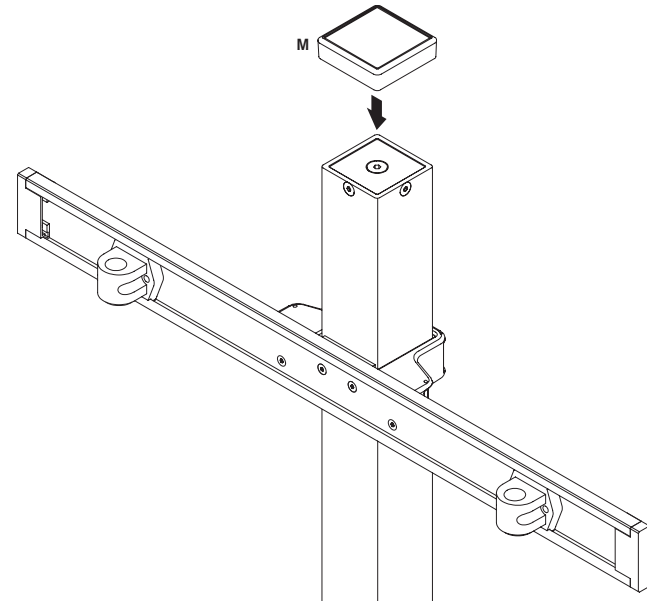 



# STEP 5

# MONITOR TILTER



 
 
## STANDARD TILTER & SPRING TILTER

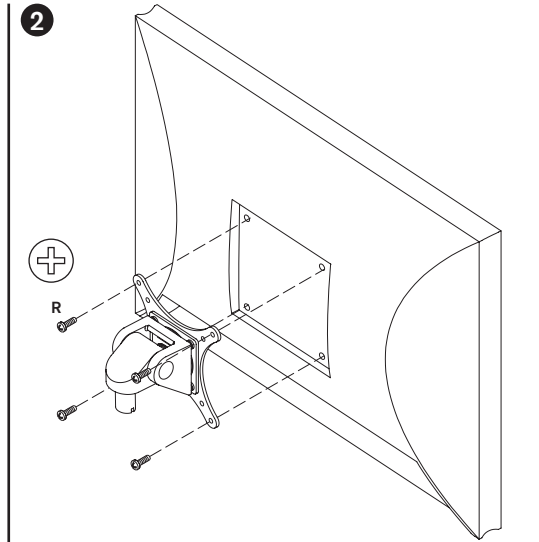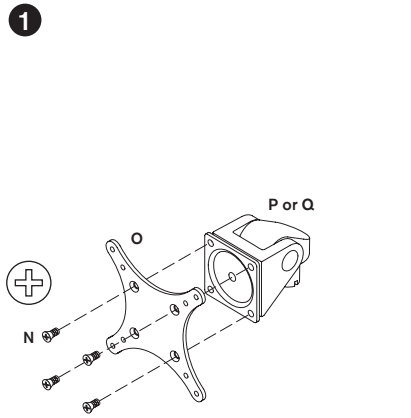

## QUICK RELEASE TILTER

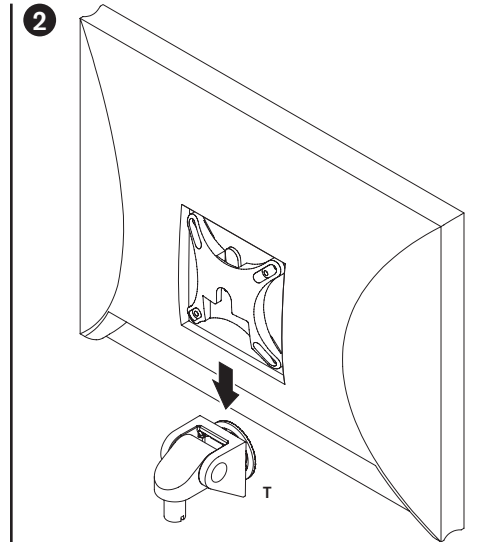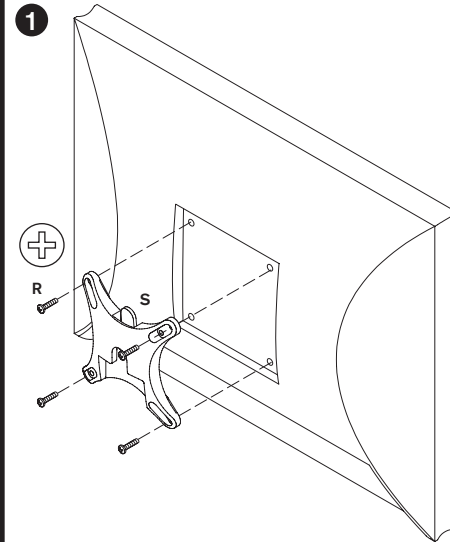  



## FINE TUNE HEIGHT ADJUST TILTER

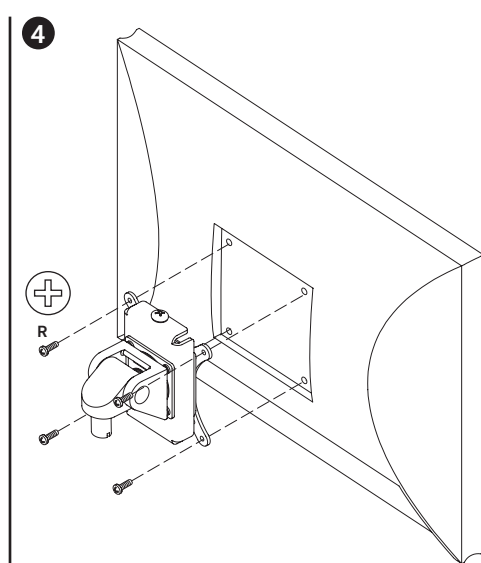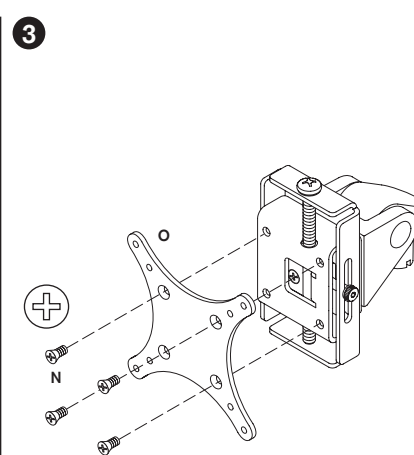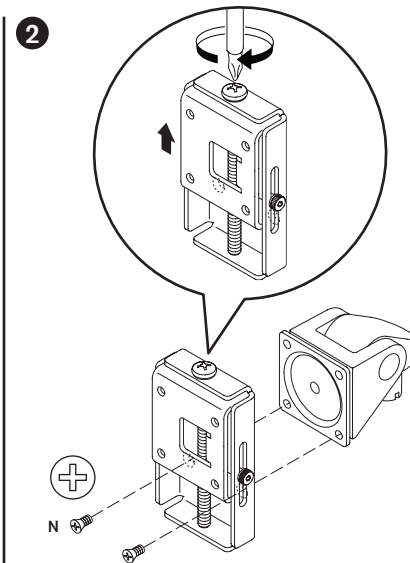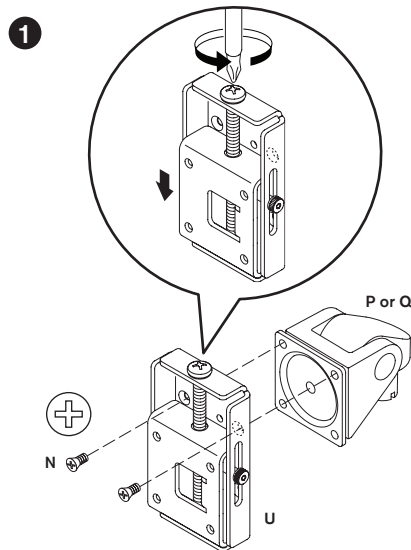    

# STEP 6

# MONITOR CUPS

  1

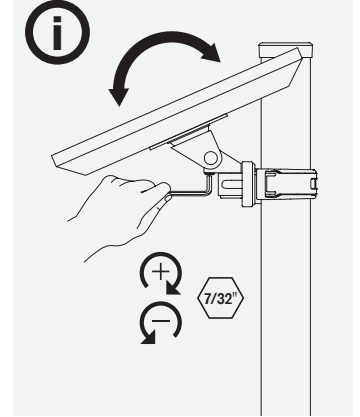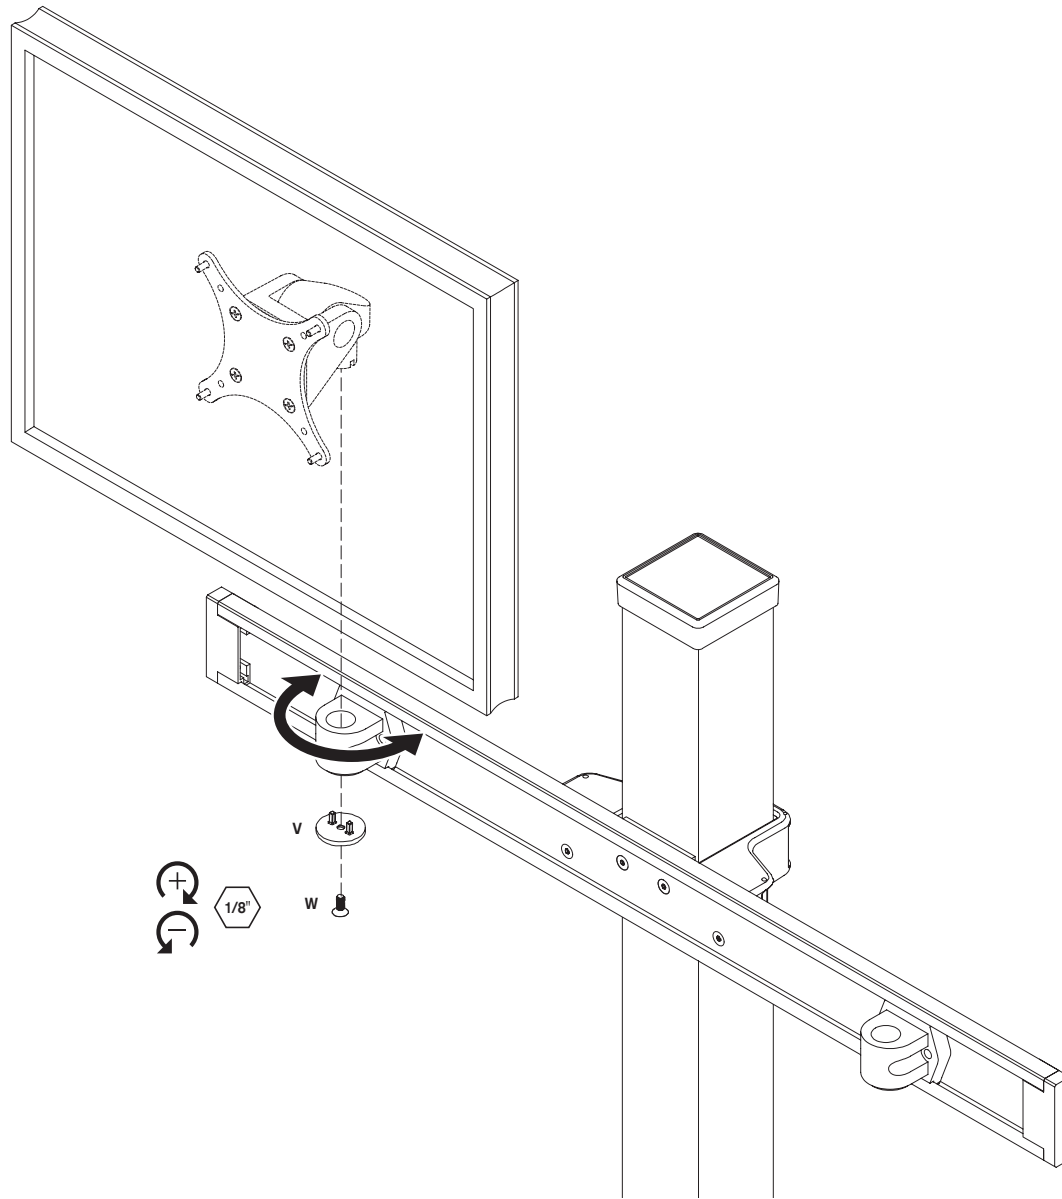





# STEP 7

# CABLE MANAGEMENT

 1

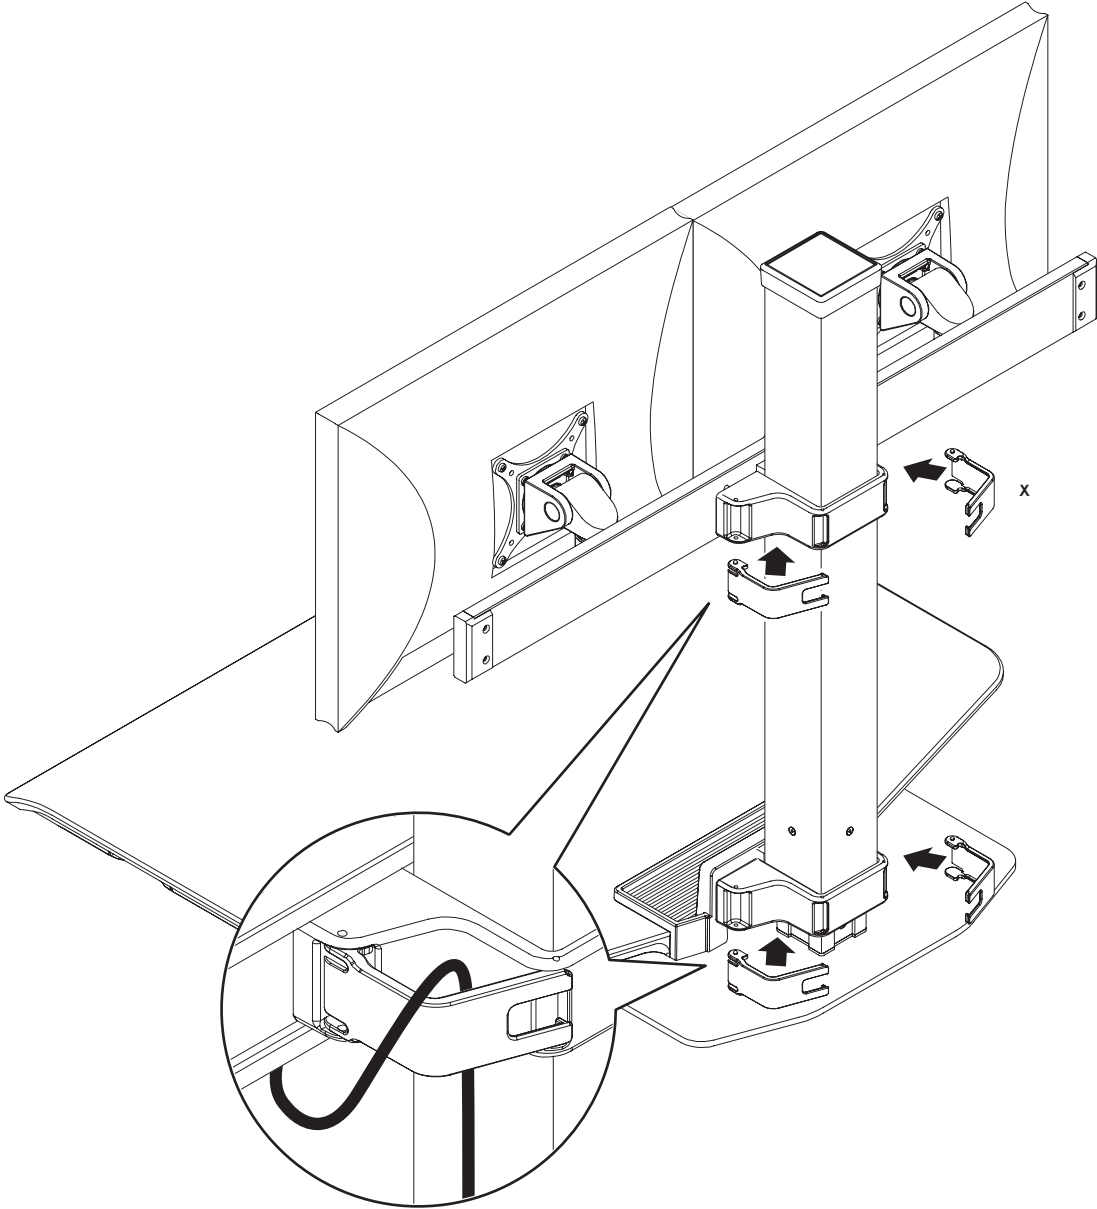

# HEIGHT ADJUSTMENT

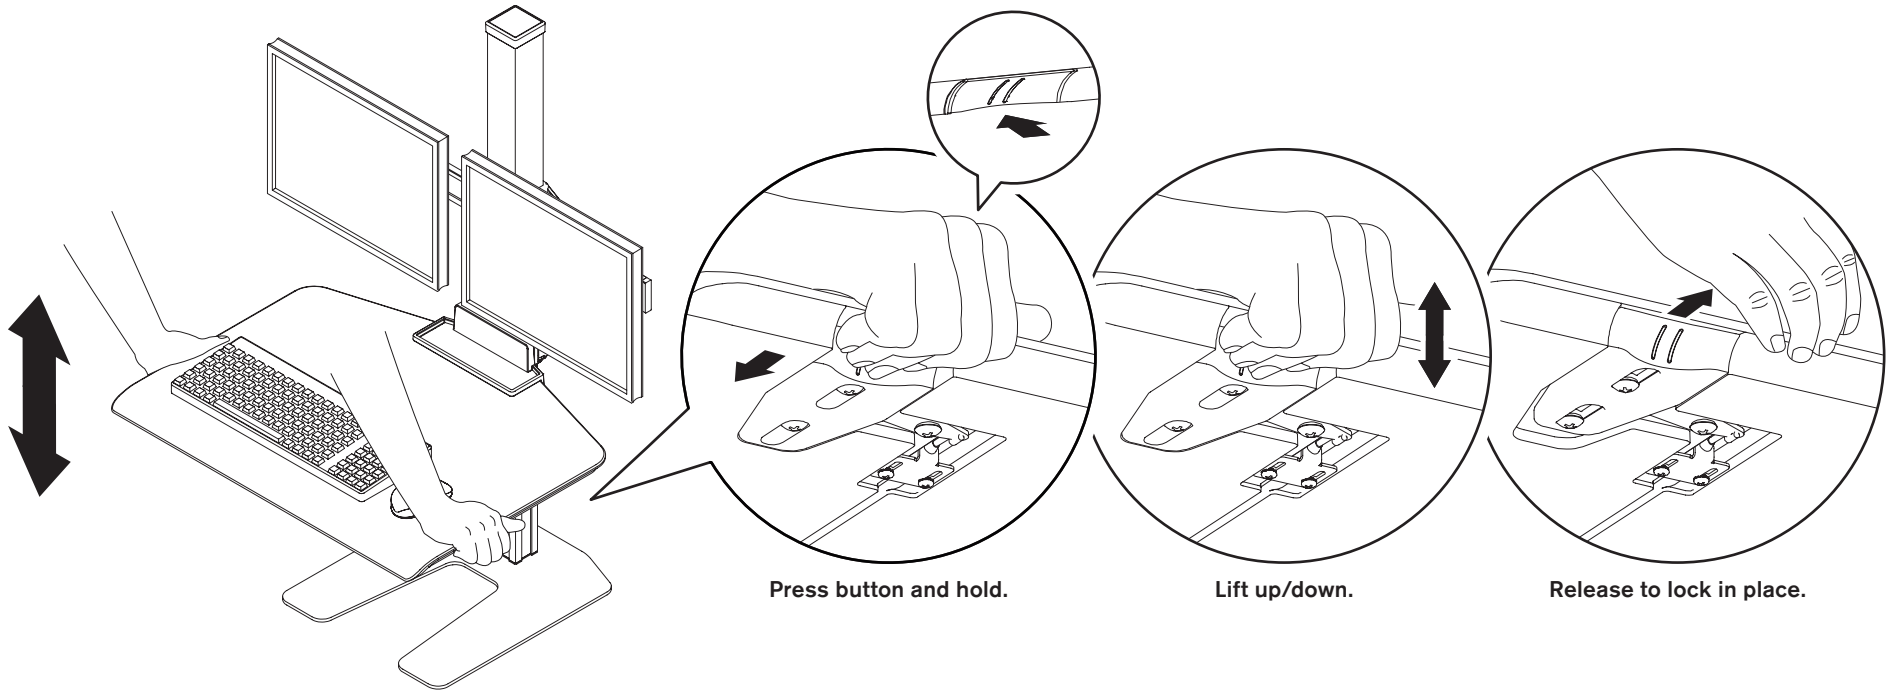 

## **i** Is your height adjust button not working? If so, make the adjustments below.

- 1 Slide workstation so that the work surface hangs over desk edge to allow access to underneath the work surface.
- 2 Loosen the two screws as shown.
- 3 Slide bracket in the direction shown and tighten screws.
- 4 Test height adjust button – readjust by repeating the steps above as necessary.

