 
Adjustability Feature



○ Tilt tension

To decrease tension, turn counterclockwise. To increase tension, turn clockwise.

② Pneumatic height adjustment

To raise chair, lift body weight up and pull lever up. To lower chair, remain seated and pull lever out.

Adjustable seat depth

Lift lever up and hold, shift seat forward or back, and release lever to lock. Available on models TS30802, TS30812, and TS30822 only.

O Upright back lock

To release, lean forward and flip lever up. To lock, lean forward and flip lever down

3 Arm height

Pull trigger up and hold, pull arm up or push down, and release trigger.

6 Arm width

Push toggle down to release and adjust arms in or out. Push toggle up to lock.

Back height

While seated, pull levers inward, raise or lower back into position, and release lever.

Height-, width-, and pivot-adjustable arm

Press button under arm caps to adjust height. Grasp arm caps to slide width in and out, and to pivot.

Crew Dimensions



Full-back armless



Full-back with arms

26"	26"
261/2"	261/2"
395/8"-445/8"	395/8"-445/8"
18"	18"
167/8"-187/8"	167/8"-187/8"
191/2"	191/2"
16"-21"	16"-21"
19"	19"
211/4"-231/2"	211/4"-231/2"
3°	3°
96°-110°	96°-110°
	26½" 39½"-44½" 18" 16½"-18½" 16"-21" 19" 21¼"-23½" 3°

Fixed-height T-arms

Width between arms	=	173/4"-191/2"
Arm cap width	=	31/2"
Arm cap length	-	9"
Arm height from seat	= 0	9"

Height- and width-adjustable T-arms

Width between arms	-	173/4"-191/2
Arm cap width	_	31/2"
Arm cap length		9"
Arm height from seat	=	7"-11"

Height- and width-adjustable pivot

T-arms		
Width between arms	-1	121/4"-191/2'
Arm cap pivot	-	35°
Arm cap width	-	41/2"
Arm cap length	=	10"
Arm height from seat	=	7"-11"

Stool

Seat height from floor	221/4"-321/2"	221/4"-321/2"
Foot ring diameter	20"	20"
Foot ring height	73/4"-131/4"	73/4"-131/4"



800.531.3746 • info@thehumansolution.com • thehumansolution.com