


Writing Desk Pad

SKU: ACC045

UPLIFT DESK

Protect your desk against indentations and accidental scratches while writing, and improve the writing experience.

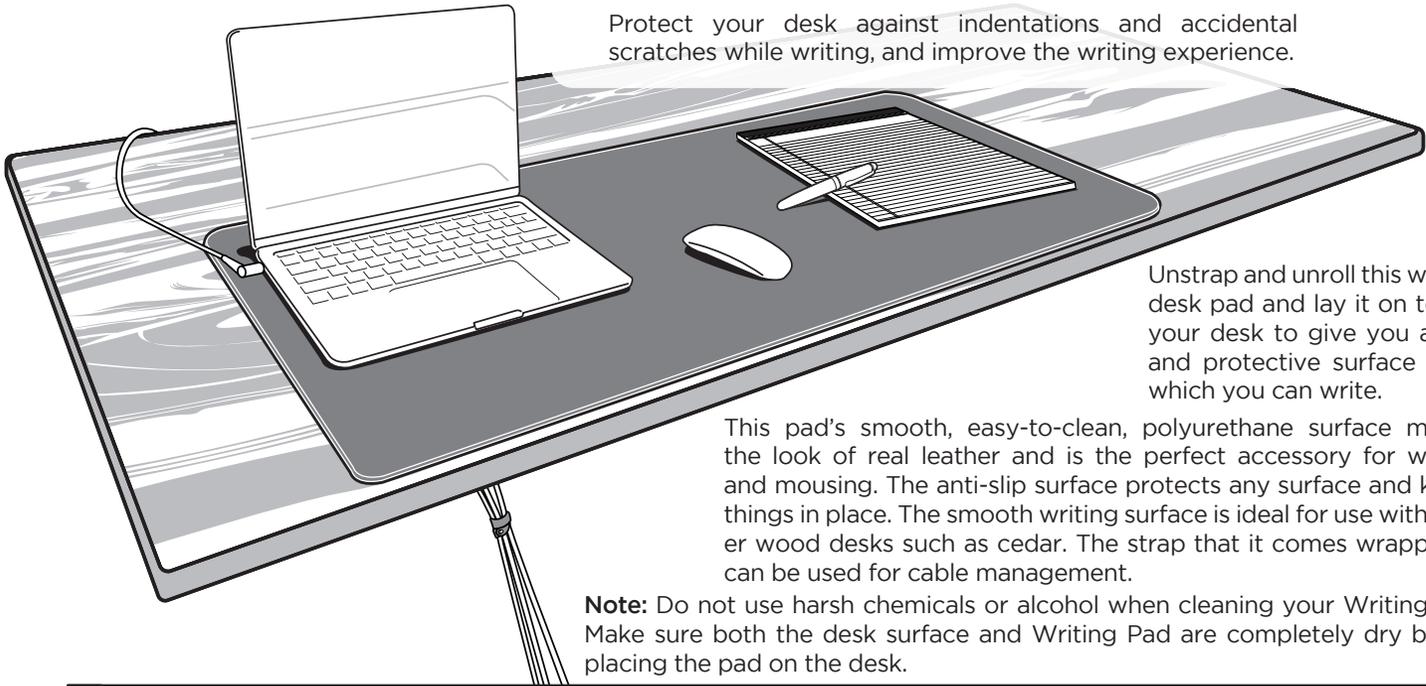

Unstrap and unroll this writing desk pad and lay it on top of your desk to give you a soft and protective surface upon which you can write.

This pad's smooth, easy-to-clean, polyurethane surface mimics the look of real leather and is the perfect accessory for writing and mousing. The anti-slip surface protects any surface and keeps things in place. The smooth writing surface is ideal for use with softer wood desks such as cedar. The strap that it comes wrapped in can be used for cable management.

Note: Do not use harsh chemicals or alcohol when cleaning your Writing Pad. Make sure both the desk surface and Writing Pad are completely dry before placing the pad on the desk.

© **Copyright Notice:** This guide is a component of UPLIFT Desk Writing Desk Pad. This guide is a part of the scope of delivery, even if the item is resold. This guide is also available on the UPLIFT Desk website: upliftdesk.com. Excerpts or copies may not be forwarded to third parties or used in any other published form without the prior written consent of UPLIFT Desk. These instructions are subject to United States copyright law.