

Whisper Click Mouse


ACC053

UPLIFT DESK

Work better. Live healthier.

Package Contents

 Mouse




2.4 G USB Receiver
(shipped inside mouse)



Also needed, but not included

 
AAA batteries
qty 2



Assembly Instructions


Step 1

 Open the battery compartment on the bottom of the mouse, remove the USB receiver, and plug it into a USB port on your computer.

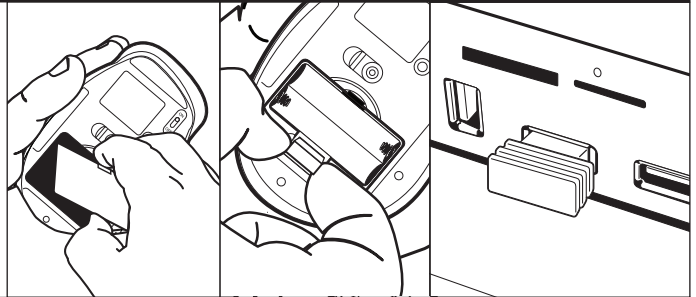


Step 2

 Insert two AAA batteries then replace the battery compartment door.

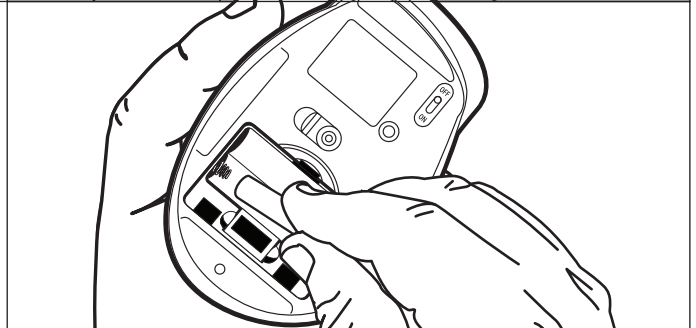


Step 3

 Turn on the mouse by flipping the power switch on the bottom to "ON". The mouse will automatically connect to your computer and will be ready for use.

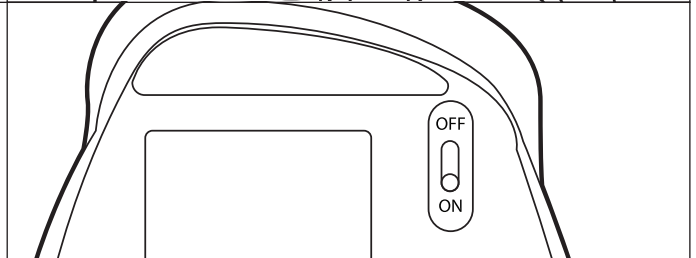


Buttons and Functions

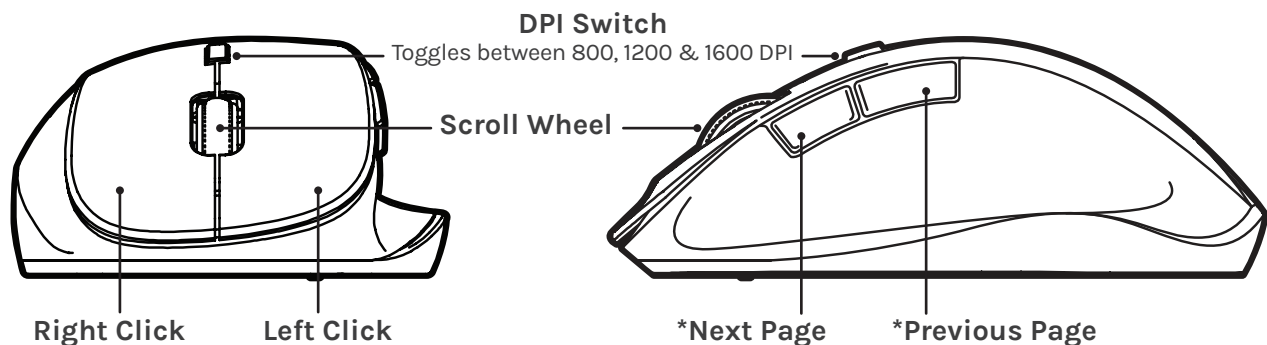 

***Please Note:** The Next Page and Previous Page buttons are not recognized on Mac OSX and higher.

 Troubleshooting

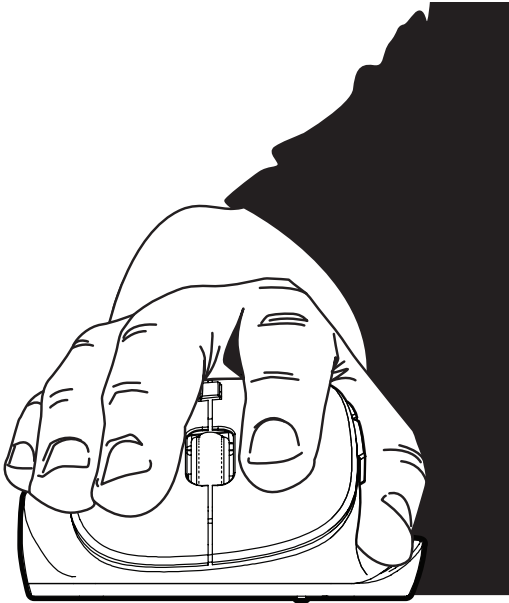

Mouse not detected

Check the USB Receiver, and ensure that Receiver and USB ports are properly aligned and inserted.



Optical lens not illuminated red

Check that power switch is ON.



Cursor does not move

Check if mouse is detected and follow instructions in “Mouse not detected” section above.

Check your mousing surface. Do not use Mouse on transparent surfaces like glass, on reflective surfaces like mirrors, on rough or porous surfaces, or on a surface with complex color patterns.

The Mouse may be in power-save mode. After 15 minutes of inactivity, the Mouse will go to sleep. To wake it up, simply click a button once.



Batteries are drained

Replace both AAA batteries.

Safety and Warnings

CAUTION: Read all instructions before assembly. Failure to assemble or operate properly may result in damage or personal injury. Retain manual for future reference.

CAUTION: There are no serviceable parts included. Any attempt to open or modify the device could present the risk of electric shock or other hazard and will void the warranty.

CAUTION: This device contains small parts, keep small parts away from children.

CAUTION: Only use attachments/accessories that come with the device.

CAUTION: Clean only with dry cloth.

CAUTION: Do not expose this product to water or other types of moisture.

CAUTION: This product (and any batteries it contains) must not be disposed of with household waste. For information about how to dispose of batteries and electronic waste, please contact your local city or waste disposal service.

CAUTION: Visit our Ergonomic Calculator (www.upliftdesk.com/ergonomic-calculator/) to learn how to set up your ergonomic workstation to reduce your risk of musculoskeletal disorders.

Under no circumstances does the manufacturer accept warranty or liability claims for damages caused from improper use of this product. Please provide these instructions to any new user or owner of the product.

Save This Manual: Study this manual carefully. If this product is sold, please provide this manual to the buyer, installers, or support personnel operating the product.

Copyright Notice: This manual is a component of this UPLIFT Desk product. This manual is a part of the scope of delivery, even if the item is resold. This manual is also available on the UPLIFT Desk website: upliftdesk.com. This manual is subject to United States copyright law.

For assembly assistance, visit upliftdesk.com/contact, call 800-349-3839, or email support@upliftdesk.com
©2024 UPLIFT Desk®. All Rights Reserved

Scan QR code for
product webpage



AI-ACC053-1.1