

 
UPLIFT DESK®

Proper Care & Use of your UPLIFT Desktop


With proper care and use, your desktop should provide you with years of beauty and service.




Do not allow liquids to puddle, or hot items to rest on the surface.

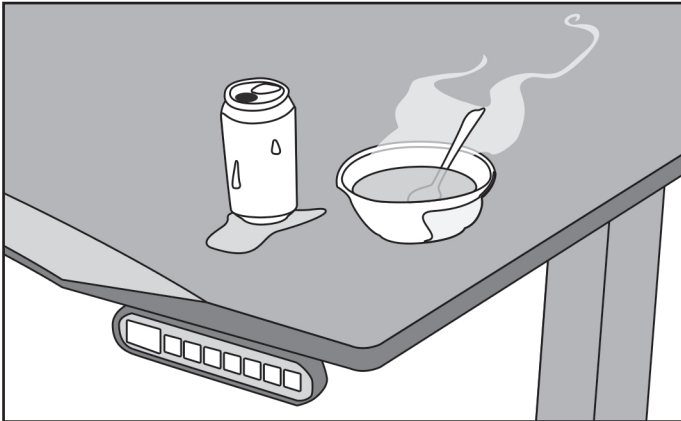


Always use a coaster or dish for beverages, hot plates, and bowls.

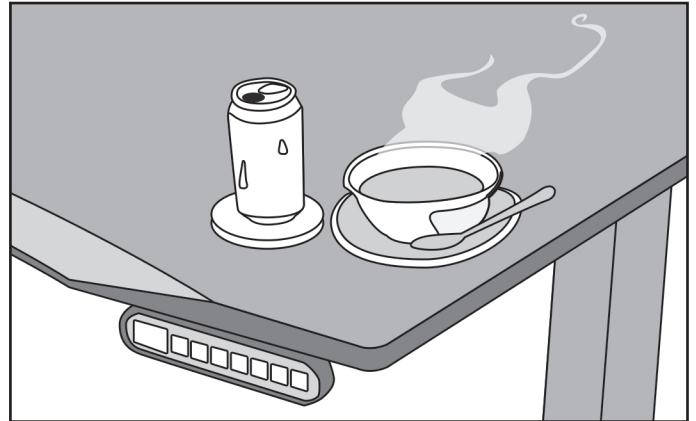

Do not expose to harsh chemicals like rubbing alcohol, bleach cleaners, acetone, or household cleaners (e.g. Windex, Mr. Clean).

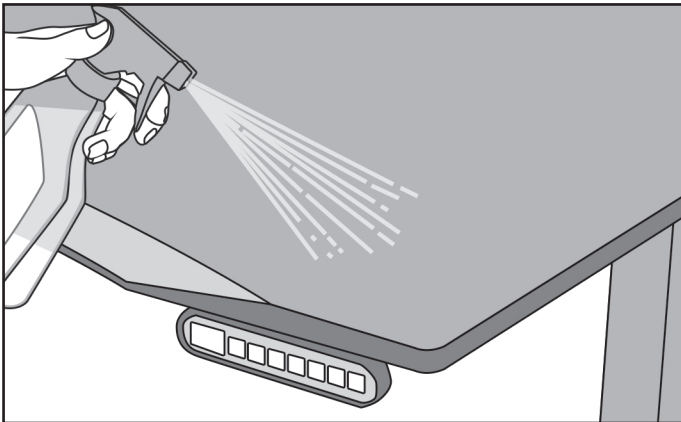

Dust with a soft cloth. If necessary, wipe clean with warm water and mild soap, then dry surface thoroughly.

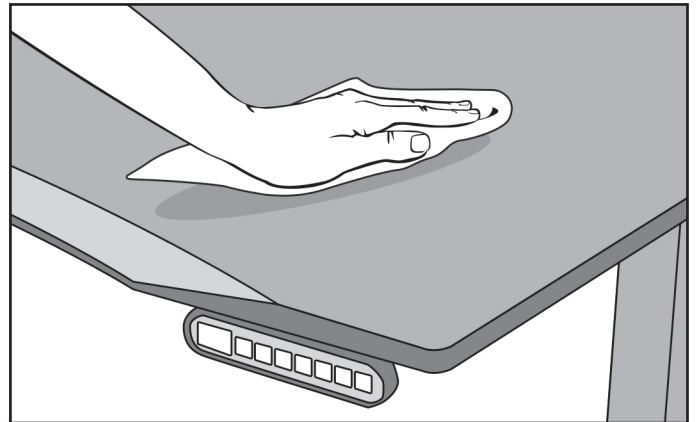

Avoid writing with excessive pressure. Do not mouse directly on the surface.



Using a mouse pad and writing evenly will preserve the desktop surface.

