
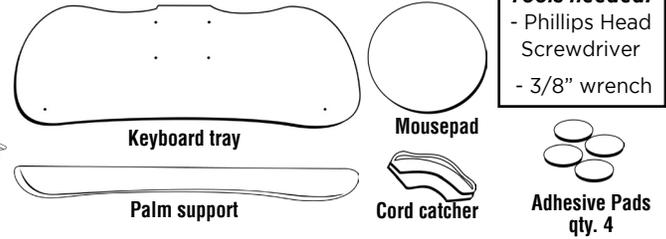


UPLIFT DESK® UPL127 Keyboard Tray Assembly Instructions

Hardware included:

Check the contents of the box to make sure you have every part needed to assemble the Uplift Keyboard Tray.

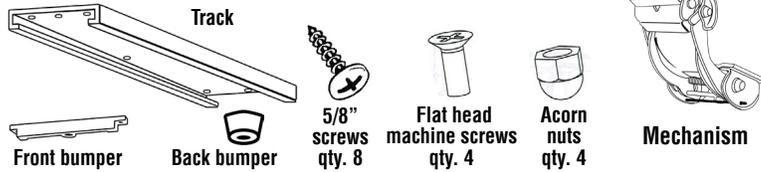

Tools needed:
 - Phillips Head Screwdriver
 - 3/8" wrench

Step One - Mount track to the desktop

This is most easily done with your desktop upside down. Choose the longest of the two tracks (either 11" or 21") that will fit under your worksurface, and place it in position. Leave about 1/2" from the front edge of the desk. If there are pre-drilled holes in your desktop, line the track up with the holes, or you can pre-drill your own 1/8" pilot holes.

- Attach track to the desktop using eight 5/8" screws.
- Install the rear bumper using one 5/8" screw.

Step Two - Install mechanism onto the track

With the desk right side up, line up the mechanism with the grooves on the track and slide it in.

Please note: the mechanism will not adjust up or down until the tray has been attached and the shipping pin is removed (see steps three and four)

Step Three - Mount tray to the mechanism

Attach the tray to the mechanism using 4 of the flat head machine screws provided and the existing holes on the tray. Screw the acorn nuts in to the underside of the tray.

Step Four - Remove the shipping pin

Lift up on the front of the tray & lower the back to relieve pressure on the shipping pin and remove it.


Step Five - Attach front bumper

Finally, lower the tray, slide it back on the track and install the front bumper.

Step Six - Add accessories

- Slide the foam palm support onto the front of the tray.
- Place the optional mouse pad and the cord catcher to whichever side you plan to use your mouse.
- Remove backing from adhesive pads & position over the flat head machine screws.

To adjust the tilt of the tray, turn the knob at the center of the tray.

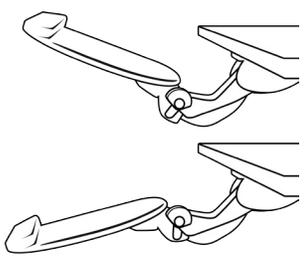

To adjust the height of the tray up and down, push down on the back of the tray while lifting the front.