
## UPL027 Modesty Panel Dimensions

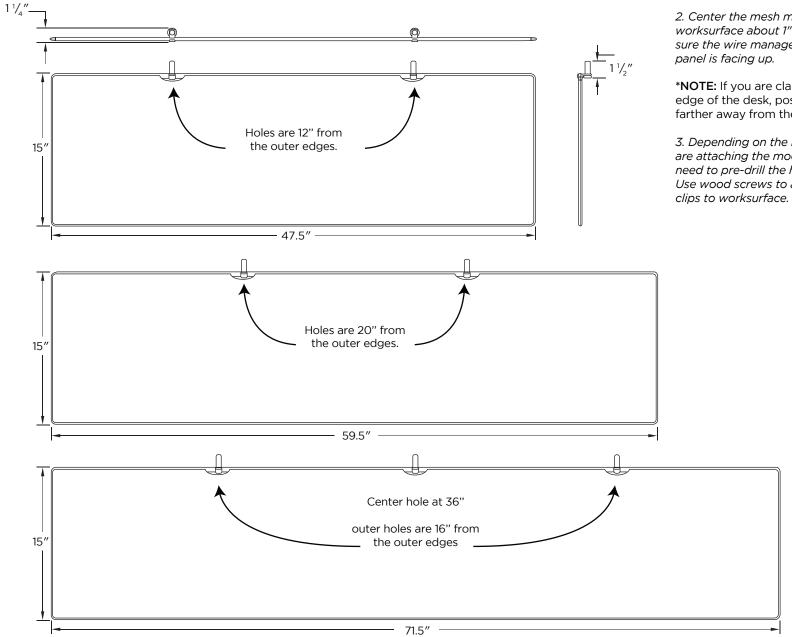

The UPLIFT Modesty Panels come in three widths 47.5, 59.5 and 71.5 inches; and are all 15 inches high.

- 1. Place a plastic mounting clip in the center of each exposed portion of the steel bar on the modesty panel. Make sure the wire management flap on the panel is facing up.
- 2. Center the mesh modesty panel on the worksurface about 1" in from the back edge\*. Make sure the wire management flap on the panel is facing up.
- \*NOTE: If you are clamping anything to the back edge of the desk, position the modesty panel farther away from the edge to leave room.
- 3. Depending on the material of the surface you are attaching the modesty panel to, you may need to pre-drill the hole for the fastener.

  Use wood screws to attach plastic mounting clips to worksurface.