
Rectangular Acoustic Wall Panel

KIT-ACU021-WALL








Before you begin:


These instructions contain multiple installation options which require the purchase of additional materials not included in this kit. Please read the instructions before you start. Depending on the installation method you choose, you may need different items.

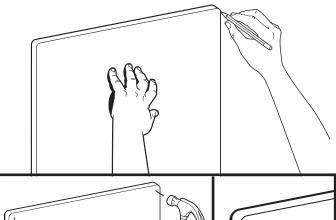

Step 1


Choose a place on your wall where you want to hang your Acoustic panel. Mark the edges of the panel on the wall with a pencil to help with placement and to ensure the panel will be level when affixed to the wall.

Repeat this if you are mounting several panels.

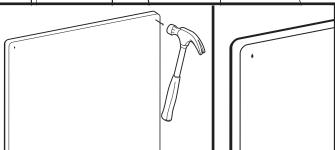

Option 1 - Finish Nails

Make sure your nails are 1.5" long. Have a friend hold the panel in it's spot, and hammer in the Finish Nails near the corners. Drive the nails with enough force to get them into the wall, but don't hammer so hard that you might dent or damage the panel.

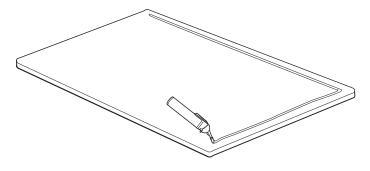

Option 2 - Loctite® Construction Adhesive

Apply a bead of adhesive two inches from the the edge of the panel.

Follow the instructions on the Loctite® Adhesive carefully.

Carefully align the panel into the space you've drawn in Step 1, and press firmly around the edge as detailed in the Adhesive's instructions.



A CAUTION: Read all instructions before assembly. Failure to assemble properly may result in damage.

Copyright Notice: This guide is a component of this accessory. This guide is a part of the scope of delivery, even if the item is resold. This guide is also available on the UPLIFT Desk website: upliftdesk.com. Excerpts or copies may not be forwarded to third parties or used in any other published form without the prior written consent of UPLIFT Desk. These instructions are subject to United States copyright law.



4973113134602 • INS-ACU021-WALL