




bivi[™]

- * table
- * table with back pocket
- * electrical

Installation Instructions

Tools Needed



(included)

Assembly Video



myturnstone.com/bivi/instructions

Time Needed



Assembly time:
20 Minutes


Difficulty Scale




really
easy

a little
more difficult

Here's what's in the boxes

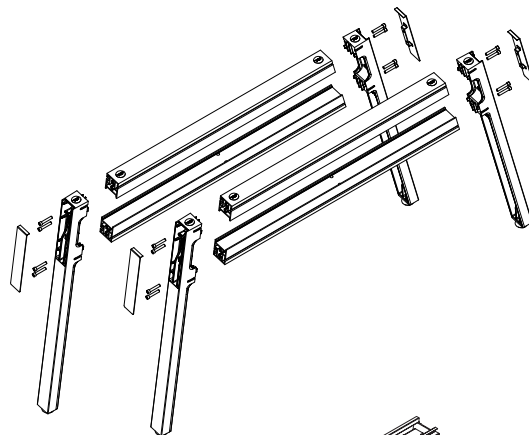

leg

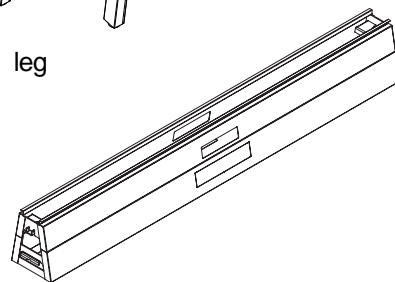

electrical trough

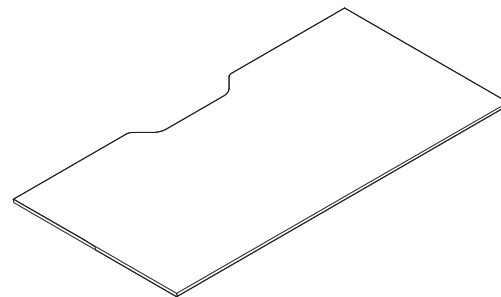


table top



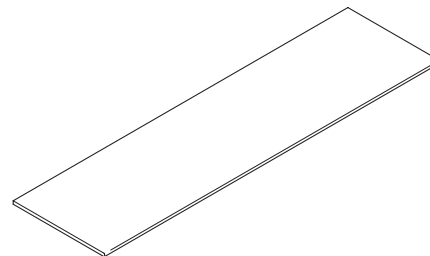


table top with back pocket


For assembly video, go to myturnstone.com/bivi/instructions

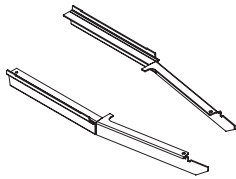


right and left brackets

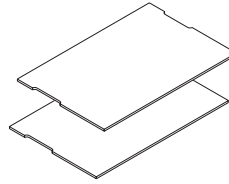


pocket cover



trough end caps

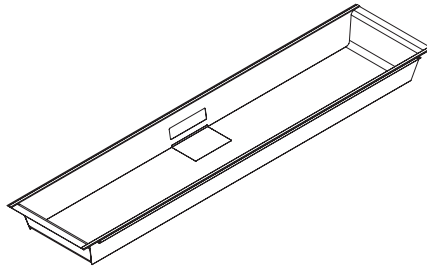

back pocket

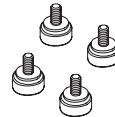


thumb screws

STEP

1

Assemble leg.


- Pull off covers (a).
- Install leg onto supports with four cap screws. Screws must be securely tightened with no gaps between the parts. Recommend tightening screws to 66-72 in-lbs (b).
- Install opposite leg same as previous step (c).
- Snap on covers (d).

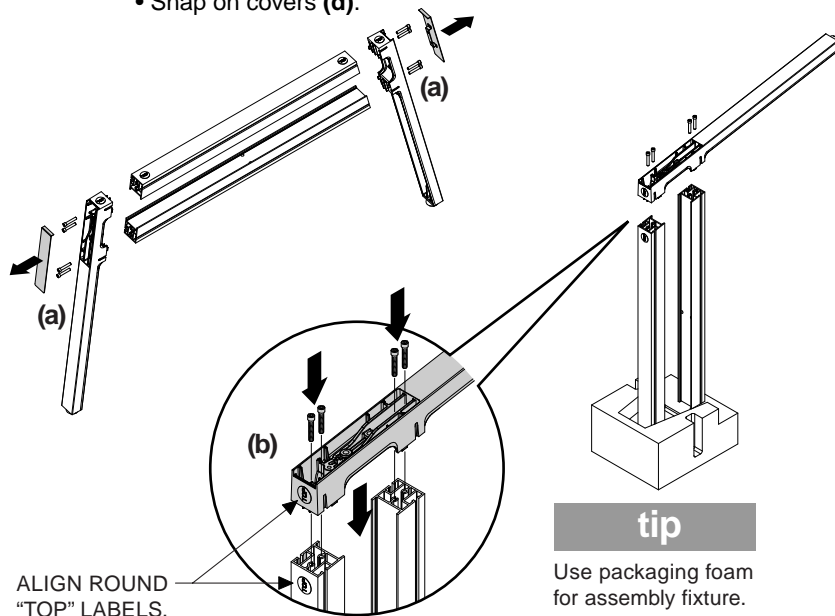

ALIGN ROUND
"TOP" LABELS.

tip


Use packaging foam
for assembly fixture.

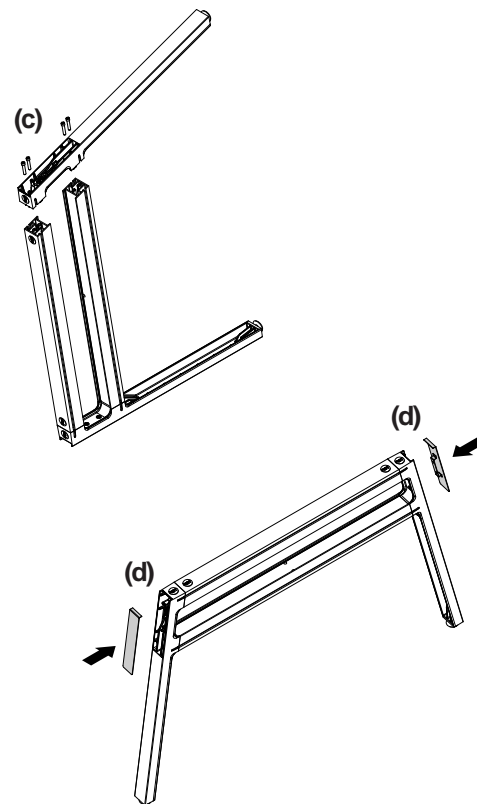

STEP

2

Stage trough.

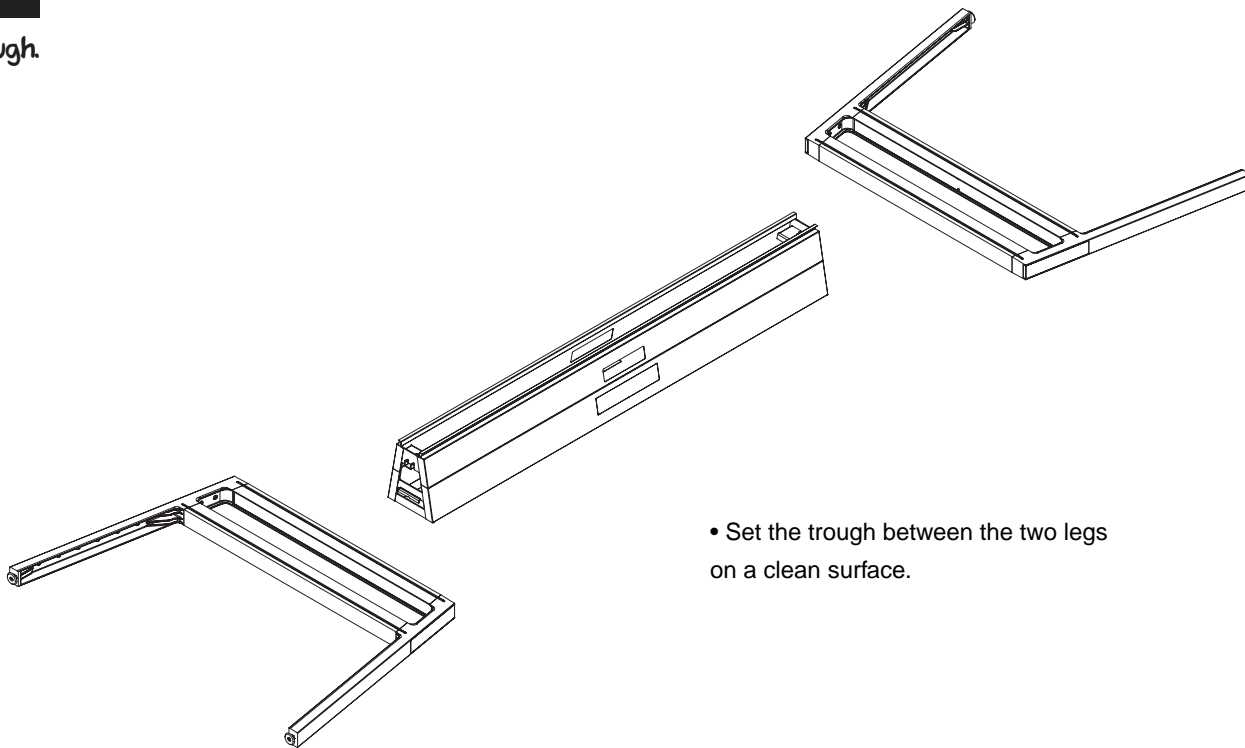

- Set the trough between the two legs on a clean surface.

STEP


3

Attach leg
to trough.


tips

Rest one side
of the trough
on the floor and
place lip on the
other side into
the bottom edge
of the leg.

- Stand one leg up.
- Lift and place end of electrical trough up to the leg.
- Drop the lip of the trough into the slot on the leg **(a)**.
- Make sure the connection bracket is fully engaged with the top leg slot **(b)**.
- Tighten with hex wrench **(c)**.

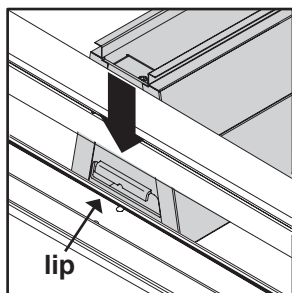


(a)

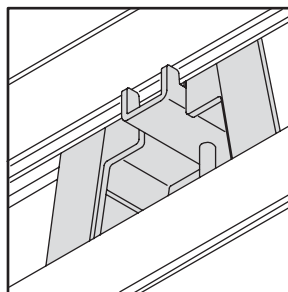

(b)

View from underneath.

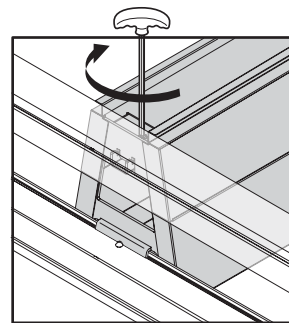


(c)

STEP

4

Install
second leg.

 turnstone

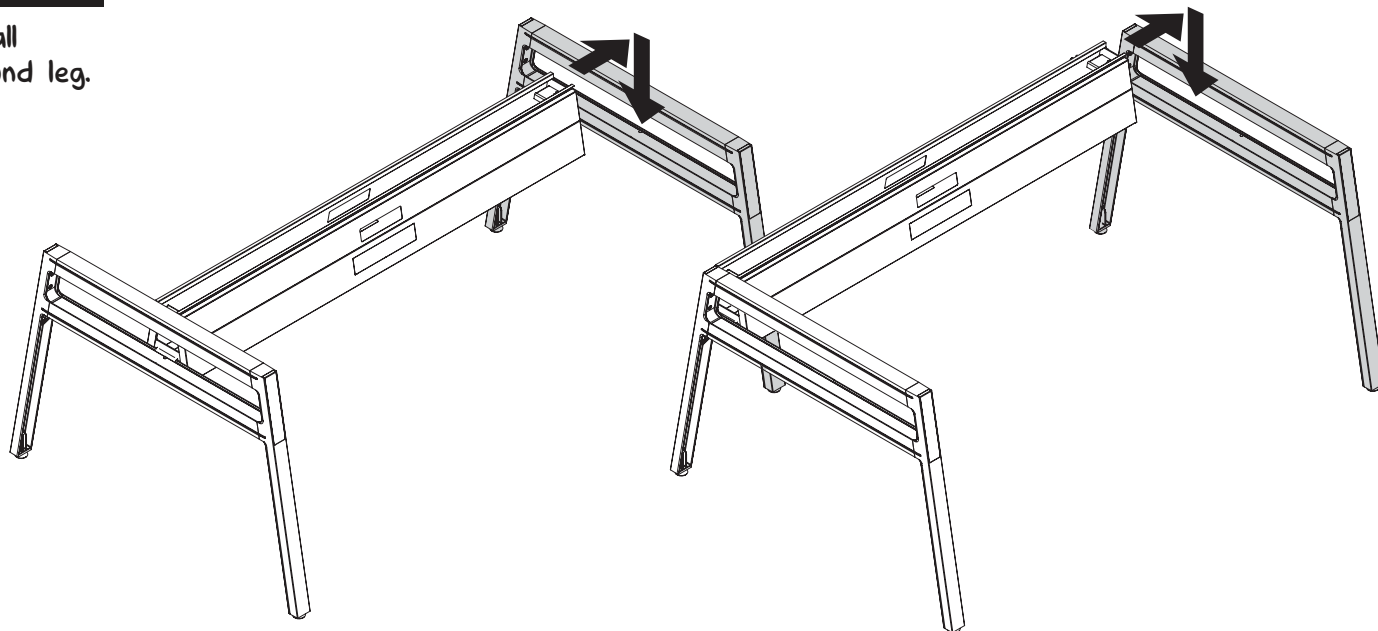


- Remember what you did a few minutes ago? Do that again.

NOTE: If you just want an individual table, place trough to far end.
Proceed with following steps.

STEP

5

Attach
worksurface
brackets.

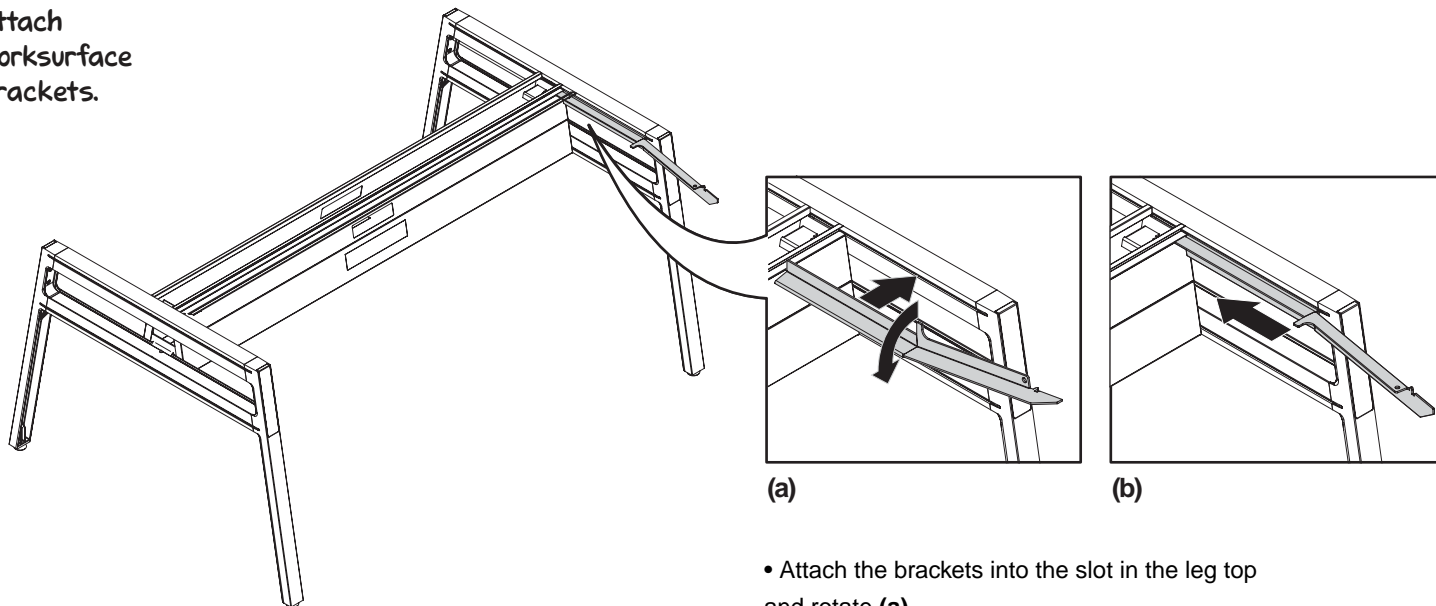

(a)

(b)

- Attach the brackets into the slot in the leg top and rotate **(a)**.
- Push the bracket back toward the electrical trough to complete the attachment **(b)**.


STEP

6

Add
electrical.

tips

For more in depth resources of the electrical, visit myturnstone.com electrical section or see assembly instructions sent in electrical box.

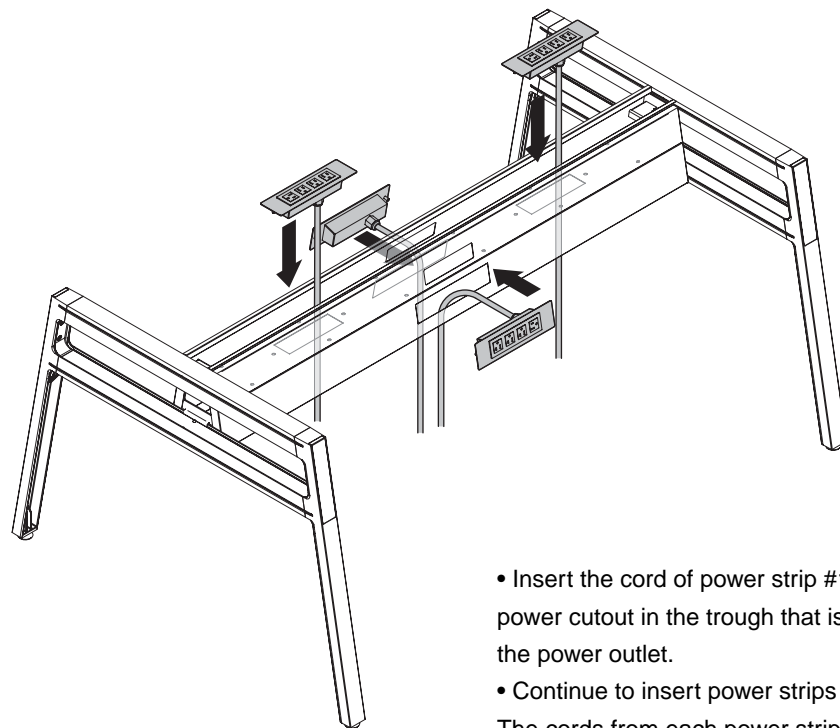


- Insert the cord of power strip #1 into the power cutout in the trough that is closest to the power outlet.
- Continue to insert power strips #2, #3 & #4. The cords from each power strip should be hanging to the floor.

STEP

7

Install knobs.

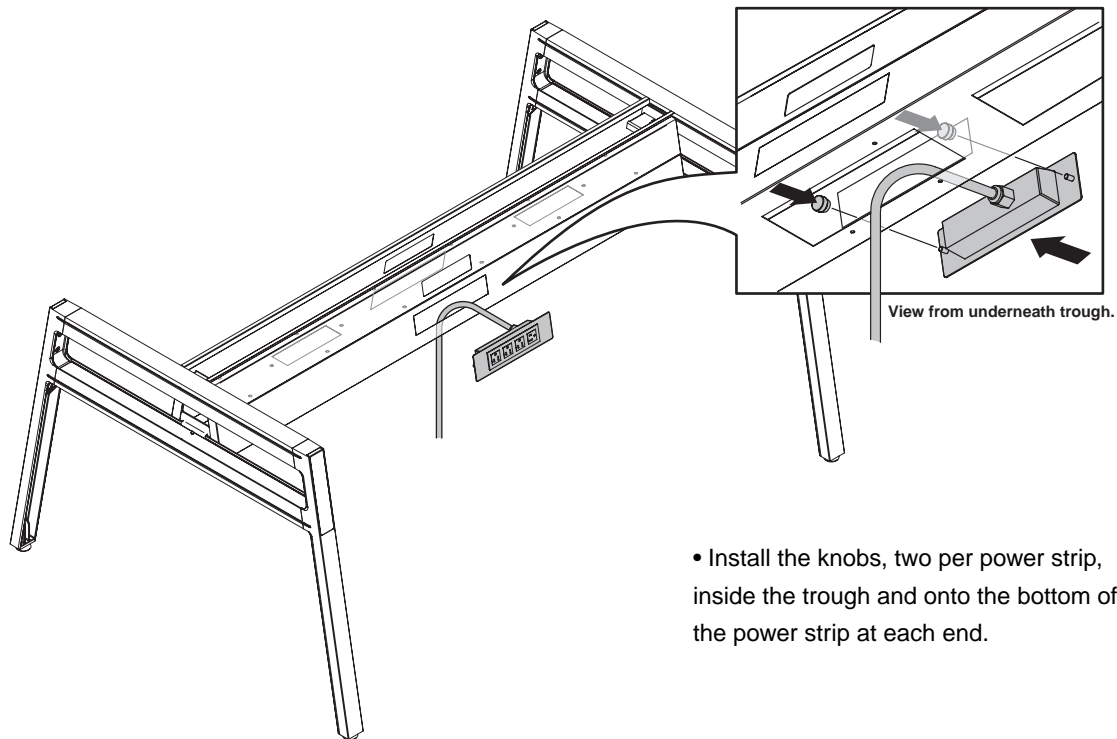


- Install the knobs, two per power strip, inside the trough and onto the bottom of the power strip at each end.

STEP

8

Feed cords
into trough.

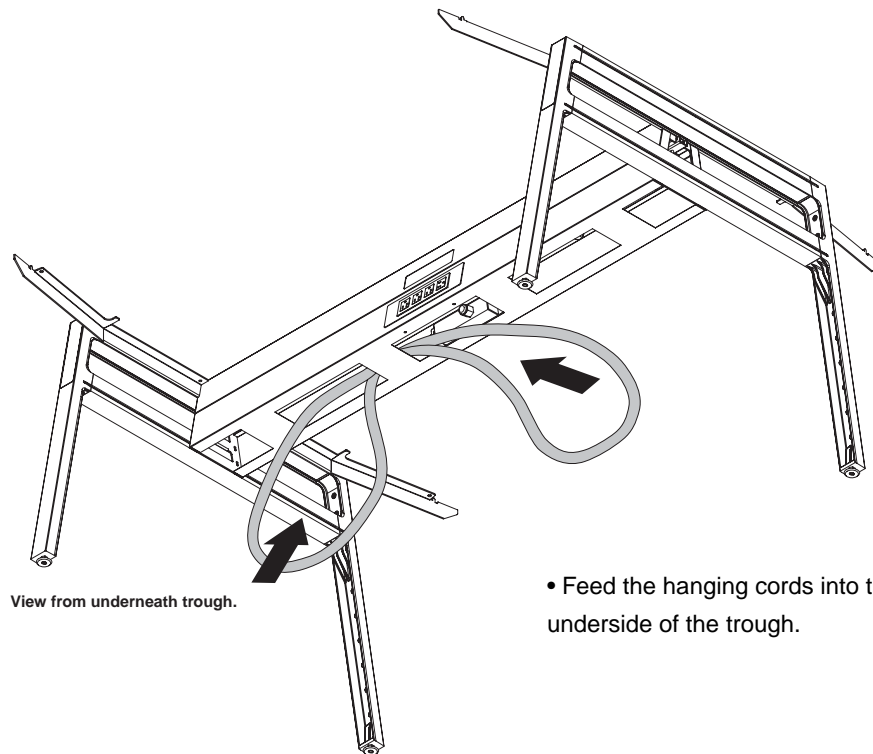


View from underneath trough.

- Feed the hanging cords into the underside of the trough.

STEP

9

Connect
the power
strips.

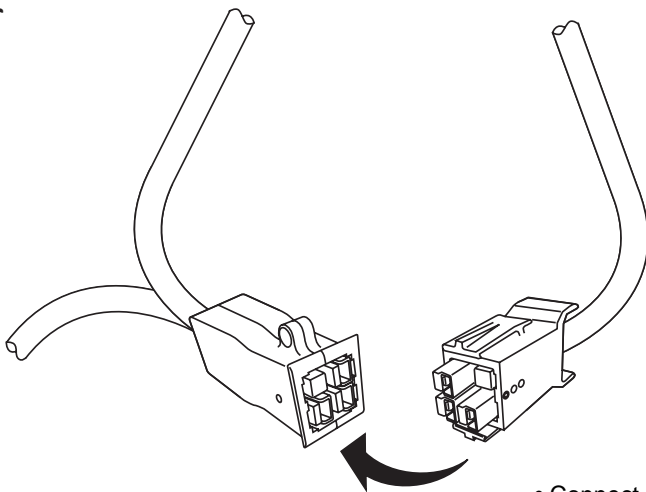



- Connect power strip #1 to power strip #2 (**Red to Red**).
- Connect power strip #2 to power strip #3 (**Orange to Orange**).
- Connect power strip #3 to power strip #4 (**Green to Green**).
- Plug the outlet on Power Strip #1 into the wall.

STEP


table top

10a

Attach the
table tops.

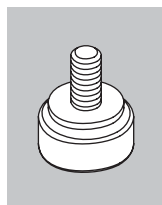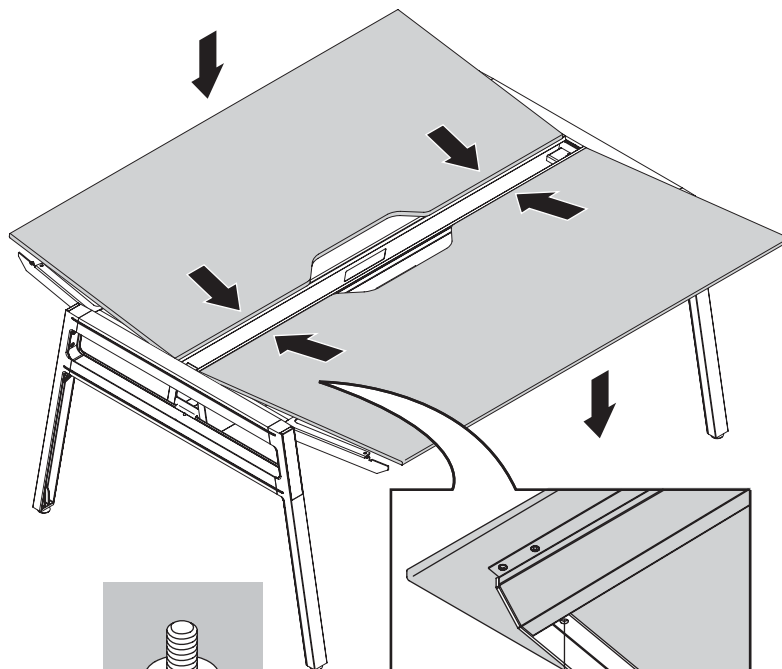

Use thumb screw.

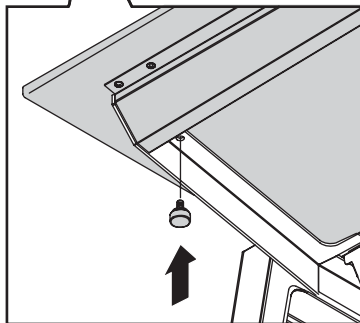


View from underneath.

- Add the table top.
- Put the back of the top into the opening along the back of the electrical trough.
- Swing the front down onto the top brackets (back of top has the cutout).
- Secure the front of the top to the worksurface brackets by hand tightening the thumb screws to the bottom of the top.

STEP split table top with back pocket

10b

Add the
back pockets.

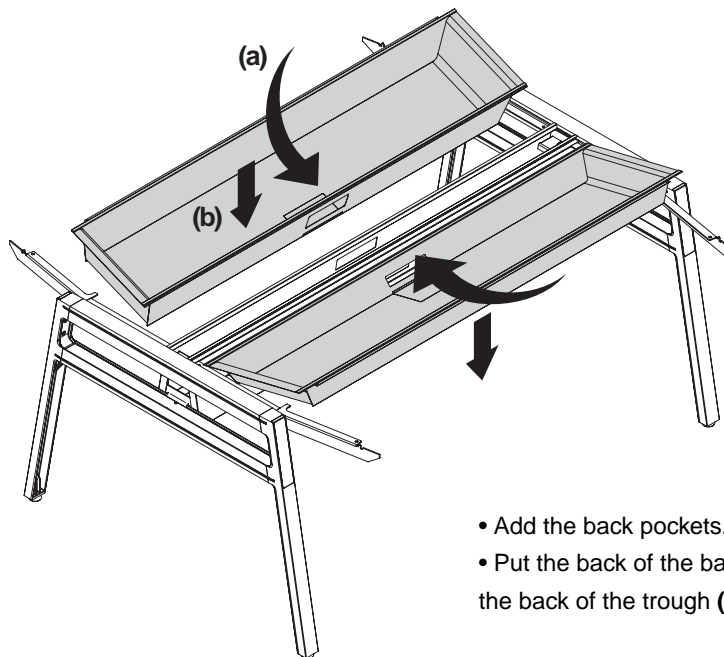

- Add the back pockets.
- Put the back of the back pocket into the opening along the back of the trough **(a)** and swing down **(b)**.


STEP

table top with back pocket




10c

Attach tops.

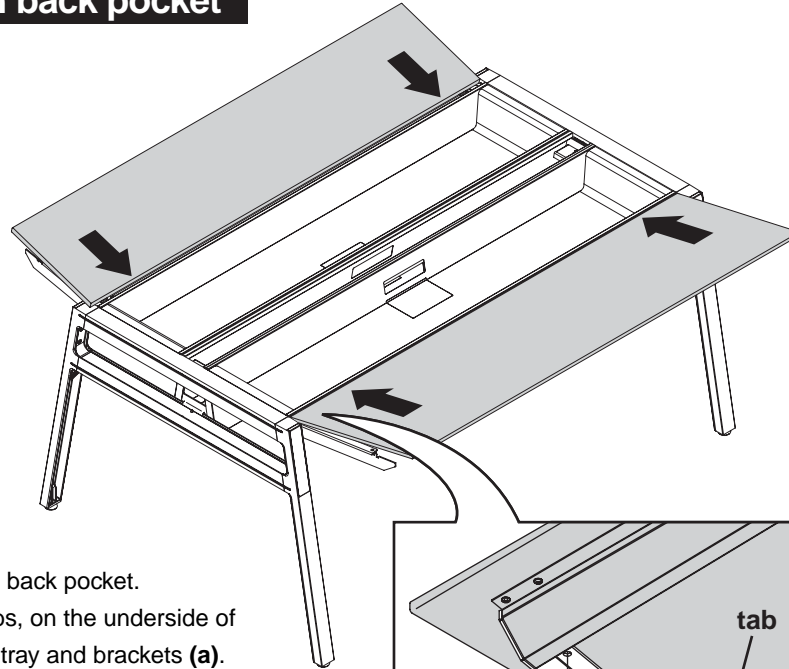

- Add the table top with back pocket.
- Make sure the two tabs, on the underside of each top, go under the tray and brackets **(a)**.
- Secure the front of the tops to the brackets by hand tightening the thumb screws to the bottom of the tops **(b)**.

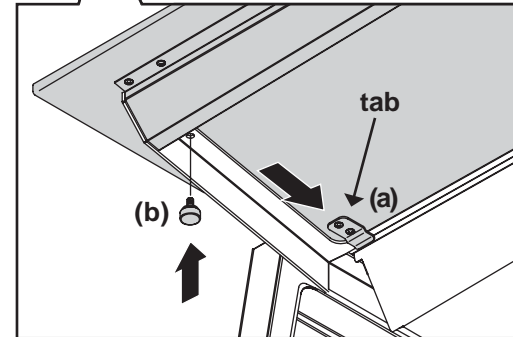


View from underneath.

STEP **trough caps**

11

Add the
trough caps.

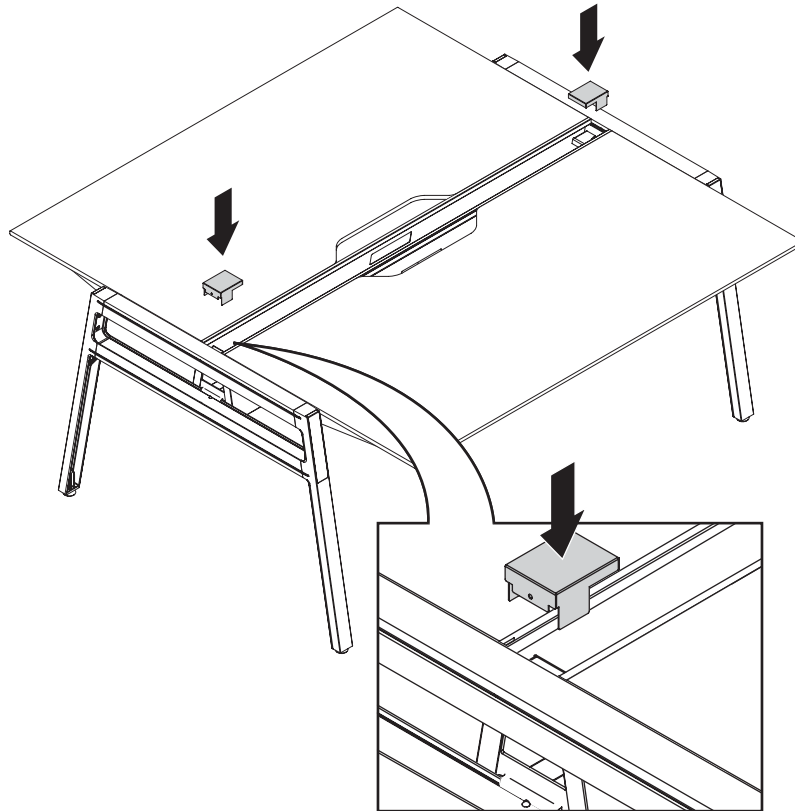


- Place in the trough caps, one on each end.

STEP **pocket covers**

12

Attach pocket covers.

 turnstone

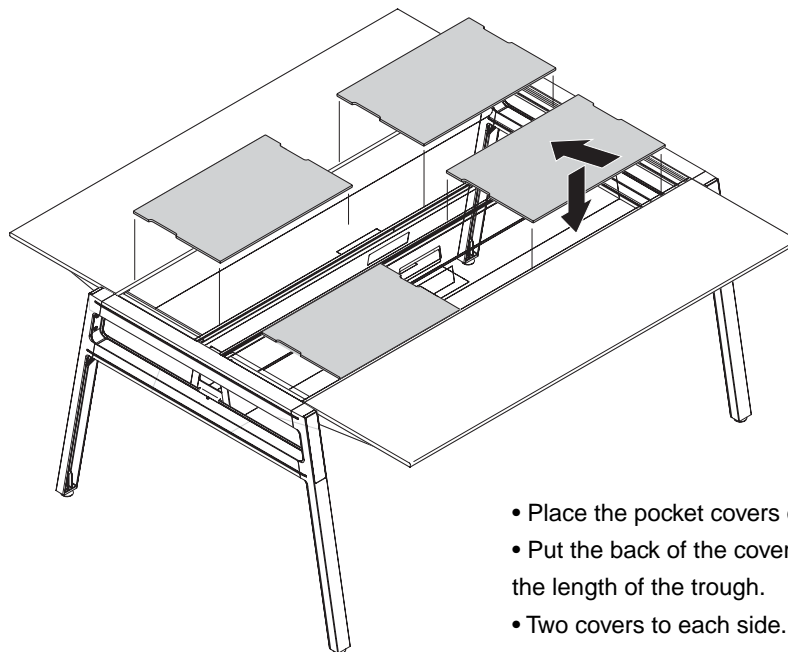

- Place the pocket covers on top of the tray.
- Put the back of the cover into the opening along the length of the trough.
- Two covers to each side.



Visit myturnstone.com to see more spots.





800.531.3746 • info@thehumansolution.com • thehumansolution.com

All rights reserved. ©2011 Steelcase Inc. Printed in the U.S.A. on recycled paper. Data subject to change. Trademarks used herein are the property of Steelcase Inc.

Some products and services may not be available in all countries. Your Turnstone representative can provide you with details.

ad-stock ID 10-0003123. bivi table, bivi table with back pocket, includes electrical: 4/11