


UPLIFT DESK[®]

Track Spacer for CPU Holder ACC031

Package Contents:

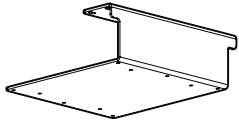


Track Spacer bracket
(qty 2)

5/16" Self-tapping screws
(qty 10)

1/2" Self-tapping screws
(qty 2)

Use the items that come with your CPU Holder:

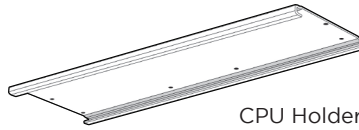

CPU Holder track




Track guard



5/8" Wood screws
(qty 8)




Back bumper

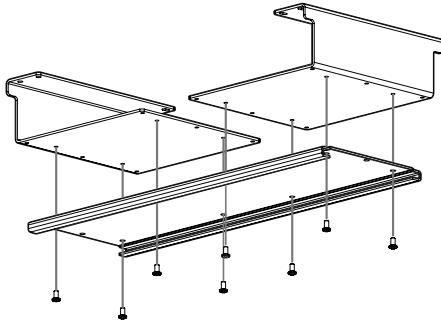

Step 1


Using eight (8) 5/16" Self-tapping screws, attach the CPU Holder track to the Track spacer brackets.

The diagram to the left is the recommended assembly. If this assembly does not allow you to mount the track spacer assembly where you want, try the Alternate assembly, shown at right.

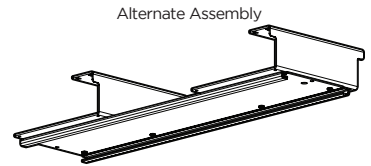


Alternate Assembly

Note: There are two lengths of Self-tapping screws: 5/16" are the shorter ones, and 1/2" are longer. Do not use interchangeably.

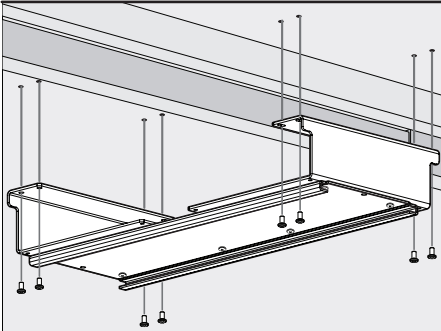


Step 2

Place the assembly over the center rails where desired, and mark screw locations. (If pre-drilling, use 1/8" diameter drill bit and drill 1/2" deep) Attach to desktop using eight (8) 5/8" Wood screws provided with the CPU Holder.

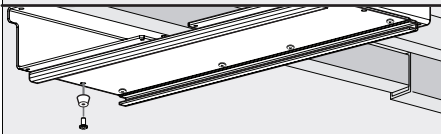


Step 3

Attach the Back bumper to the rear side of the assembly. Use one (1) 1/2" Self-tapping screw in the center hole.

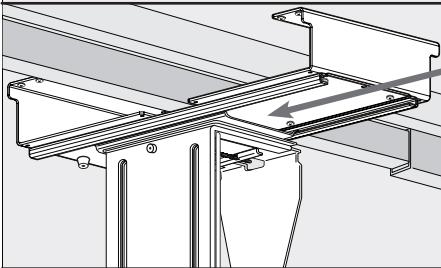

Step 4

Slide the CPU holder onto the Track.

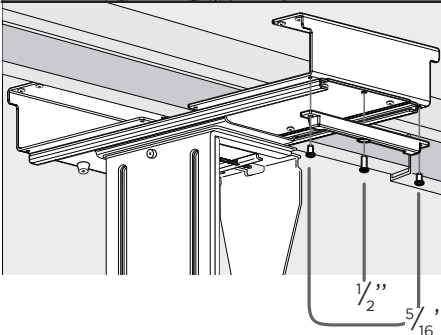


Step 5

Attach the Track guard to prevent the CPU from sliding off. Use two (2) 5/16" Self-tapping screws on the right and left holes, and one (1) 1/2" Self-tapping screw in the center hole.

UPLIFT DESK[®]

Track Spacer for Keyboard Tray ACC031

Package Contents:

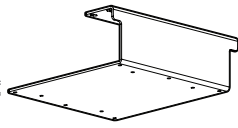

Track Spacer bracket
(qty 2)




5/16" Self-tapping screws
(qty 10)



1/2" Self-tapping screws
(qty 2)

Use the items that come with your Keyboard Tray:

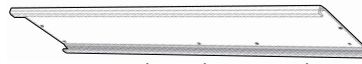

Keyboard tray track



5/8" Wood screws
(qty 8)

If you have a 'Large' or 'Switch' Keyboard Tray...



Track guard



Back bumper


If you have an E3 Keyboard Tray...



Stopper
(qty 4)



Self-tapping screw
(qty 4)

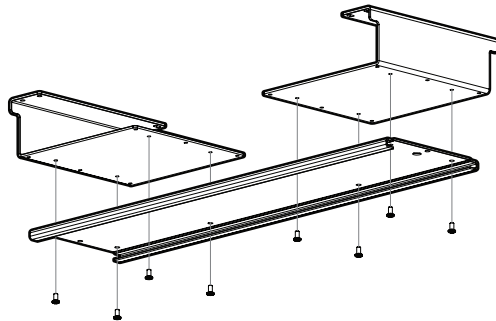


Step 1


Determine if you need to use the 11" Track or the 21" Track. Attach the Track to the Spacer brackets as shown, Using eight (8) 5/16" Self-tapping screws for the 21" Track or, six (6) Self-tapping screws for the 11" track.

The diagram to the left is the recommended assembly. If this assembly does not allow you to mount the track spacer assembly where you want, try the Alternate assembly, shown at right.

Alternate Assembly

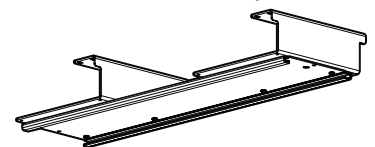


Note: There are two lengths of Self-tapping screws: 5/16" are the shorter ones, and 1/2" are longer. Do not use interchangeably.

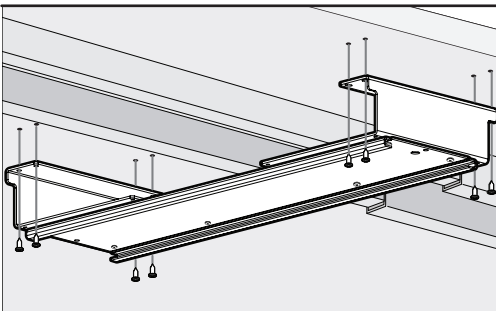

Step 2

Place the assembly over the center rails where desired, and mark screw locations. (If pre-drilling, use 1/8" diameter drill bit and drill 1/2" deep) Attach to desktop using eight (8) 5/8" Wood screws provided with the Keyboard Tray.


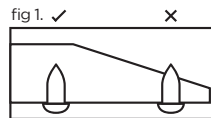


Note:

When pre-drilling on a desktop with a center-cut ergo edge, take care to ensure that the screw is not too close to the ergo edge to avoid piercing the desktop with the screw. (see fig. 1)

UPL127 & UPL140


KBT001

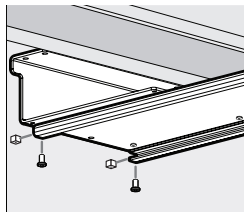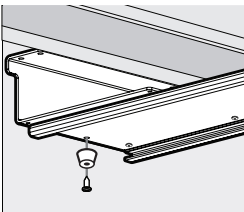

Step 3

If you have a Large Keyboard Tray (UPL127) or a Switch Keyboard Tray (UPL140), attach the Back bumper to the rear side of the assembly with one (1) 1/2" Self-tapping screw in the center hole.

If you have an E3 Keyboard Tray (KBT001) use two (2) Stoppers and two (2) of the E3's Self-tapping screws.


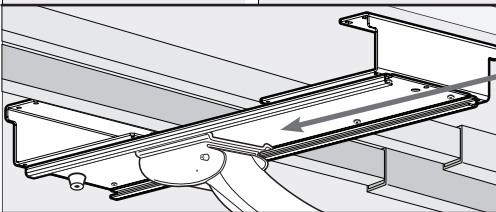


Step 4

Slide the Keyboard tray mechanism onto the Track.

UPL127 & UPL140

KBT001

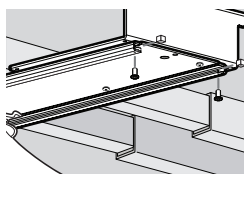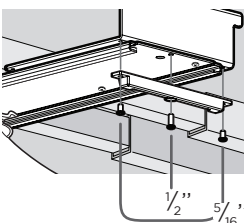

Step 5

If you have a Large Keyboard Tray (UPL127) or a Switch Keyboard Tray (UPL140), Attach the Track guard to prevent the Keyboard tray from sliding off. Use two (2) 5/16" Self-tapping screws on the right and left holes, and one (1) 1/2" Self-tapping screw in the center hole.

If you have an E3 Keyboard Tray (KBT001) use two (2) Stoppers and two (2) of the E3's Self-tapping screws.