




**Rejuvenator® Connect Mats** are modular and easily snap together to cover large areas. For best results, please follow these simple installation instructions.

**Each Rejuvenator® Connect Mat** has nine (9) male connectors on two adjacent sides and the corresponding, hidden female connectors on the other two sides. This design eliminates the need for additional fasteners, and allows the mats to be connected on all four sides for a totally flexible floor layout or design.


**Step 1.** To cover your work area, always align the mats so that the connectors are positioned in the same direction, as in the example below.

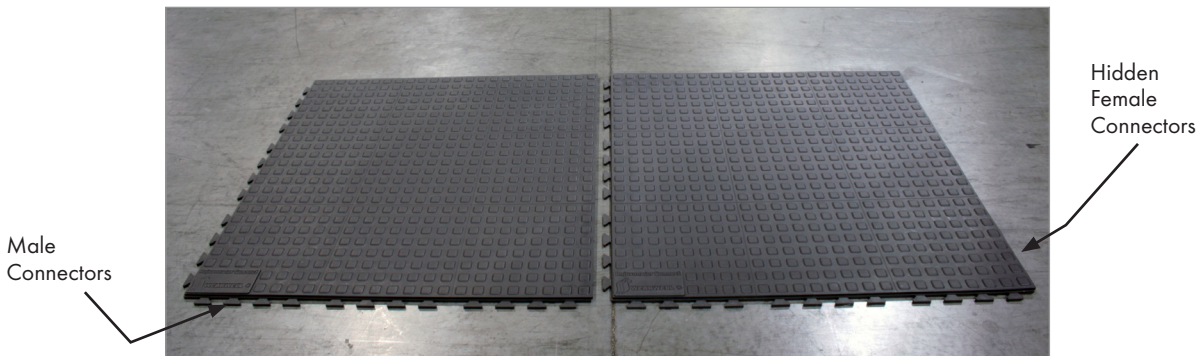


**Step 2.** Lay the first mat over the second, placing the female side over the male interlocks. To permanently secure the mats together, place a drop of “SuperGlue” on the male connectors and press down lightly for 5 seconds. Repeat this process completing one row at a time.



**Step 3.** Attach safety ramps to the mats. If you have a 2 mat configuration, simply attach the ramps as illustrated below.

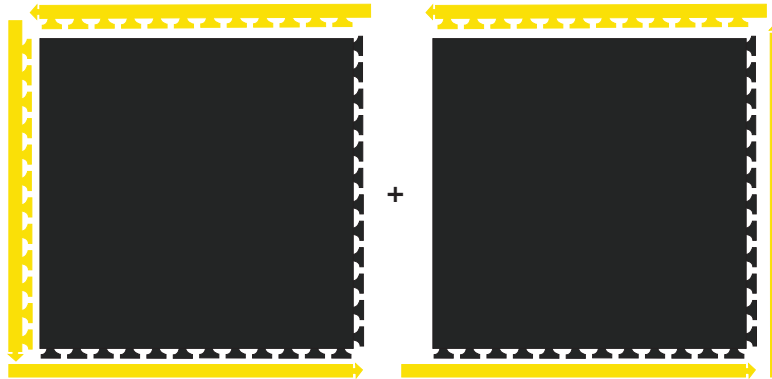

To attach the safety ramps, it is best to start at one end of the mat installation and work your way around. The end of the first ramp will create a corner.

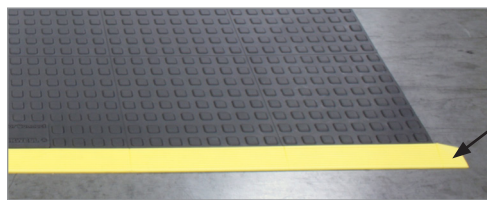

The corner created by attaching the ramp to the mat.

At that point, the corner section must be cut off the rest of the ramps installed along that edge. Simply cut this corner off with a utility knife or a large shears. Use the indented line on the surface of the ramp as a guide. To protect your hands when using a utility knife, always wear leather or Kevlar® gloves.



To permanently secure the ramps on the mats, place a drop of “SuperGlue” on the male connectors of the mats or the tiles and press down lightly for 5 seconds.

