

# Adjustable Footrest E3


ACC019

UPLIFT DESK

Work better. Live healthier.

## Package Contents

Adjustable Footrest




## Assembly Instructions

### Position 1

The Adjustable Footrest arrives fully assembled with the front and back legs folded inward. This is the lowest position for the footrest and forms a 12° angle for your feet.


See the options below for other footrest leg positions and angles.

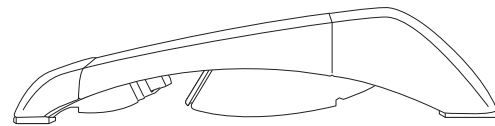

12° angle

### Position 2


Fold out just the front legs to form a 6° angle.

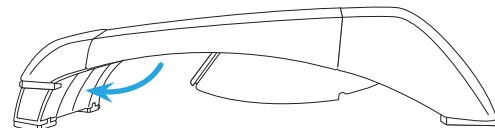

6° angle

### Position 3


Fold out just the back legs to form a 25° angle.

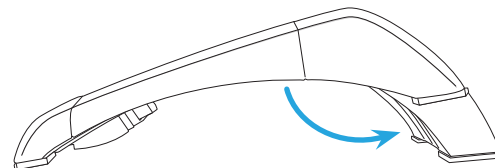

25° angle

### Position 4

Fold out both the front and back legs to form a 16° angle. This is the tallest position for the footrest and is best suited for shorter users.

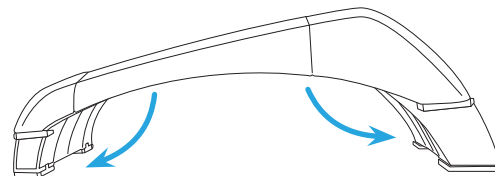

16° angle

## Safety and Warnings

**CAUTION:** Read all instructions before use.

**CAUTION:** Do not stand on, or put your entire weight on the footrest.

Under no circumstances does the manufacturer accept warranty or liability claims for damages caused from improper use of this product. Please provide these instructions to any new user or owner of the product.

**Save This Manual:** Study this manual carefully. If this product is sold, please provide this manual to the buyer, installers, or support personnel operating the product.

**Copyright Notice:** This manual is a component of this UPLIFT Desk product. This manual is a part of the scope of delivery, even if the item is resold. This manual is also available on the UPLIFT Desk website: [upliftdesk.com](http://upliftdesk.com). This manual is subject to United States copyright law.

For assembly assistance, visit [upliftdesk.com/contact](http://upliftdesk.com/contact), call 800-349-3839, or email [support@upliftdesk.com](mailto:support@upliftdesk.com)  
©2024 UPLIFT Desk®. All Rights Reserved.

Scan QR code for product webpage



AI-ACC019-1.1